

This manual should be considered a permanent part of the scooter and should remain with the scooter when it is resold.

This publication includes the latest production information available before printing. Honda Motor Co., Ltd. reserves the right to make changes at any time without notice and without incurring any obligation.

No part of this publication may be reproduced without written permission.

The vehicle pictured in this owner's manual may not match your actual vehicle.

## Welcome

Congratulations on your purchase of a new Honda scooter. Your selection of a Honda makes you part of a worldwide family of satisfied customers who appreciate Honda's reputation for building quality into every product.

To ensure your safety and riding pleasure:

- Read this owner's manual carefully.
- Follow all recommendations and procedures contained in this manual.
- Pay close attention to safety messages contained in this manual and on the scooter.

- The following codes in this manual indicate each country.
- The illustrations here in are based on the NSS125AD ED type.

### Country Codes

Code	Country
<b>NSS125AD</b>	
E, III E, V E	UK
ED, II ED, IV ED	European direct sales

\*The specifications may vary with each locale.


## A Few Words About Safety

Your safety, and the safety of others, is very important. Operating this scooter safely is an important responsibility.

To help you make informed decisions about safety, we have provided operating procedures and other information on safety labels and in this manual. This information alerts you to potential hazards that could hurt you or others.

Of course, it is not practical or possible to warn you about all hazards associated with operating or maintaining a scooter. You must use your own good judgement.

You will find important safety information in a variety of forms, including:

- Safety labels on the scooter
- Safety Messages preceded by a safety alert symbol  and one of three signal words: DANGER, WARNING, or CAUTION. These signal words mean:

### **DANGER**

You **WILL** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

### **WARNING**

You **CAN** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

### **CAUTION**

You **CAN** be **HURT** if you don't follow instructions.

**Other important information is provided under the following titles:**

**NOTICE** Information to help you avoid damage to your scooter, other property, or the environment.

## Contents

**Scooter Safety** P. 2

**Operation Guide** P. 18

**Maintenance** P. 69

**Troubleshooting** P. 105

**Information** P. 127

**Specifications** P. 142

**Index** P. 145



# Scooter Safety

This section contains important information for safe riding of your scooter.  
Please read this section carefully.

Safety Guidelines .....	P. 3
Image Labels.....	P. 6
Safety Precautions.....	P. 11
Riding Precautions .....	P. 12
Accessories & Modifications.....	P. 16
Loading .....	P. 17

## Safety Guidelines

### Safety Guidelines

Follow these guidelines to enhance your safety:

- Perform all routine and regular inspections specified in this manual.
- Stop the engine and keep sparks and flame away before filling the fuel tank.
- Do not run the engine in enclosed or partly enclosed areas. Carbon monoxide in exhaust gases is toxic and can kill you.

#### Always Wear a Helmet

It's a proven fact: helmets and protective apparel significantly reduce the number and severity of head and other injuries. So always wear an approved motorcycle helmet and protective apparel. ➤ P. 11

#### Before Riding

Make sure that you are physically fit, mentally focused and free of alcohol and drugs. Check

that you and your passenger are both wearing an approved motorcycle helmet and protective apparel. Instruct your passenger on holding onto the grab rails or your waist, leaning with you in turns, and keeping their feet on the footpegs, even when the scooter is stopped.

#### Take Time to Learn & Practice

Even if you have ridden other scooters, practice riding in a safe area to become familiar with how this scooter works and handles, and to become accustomed to the scooter's size and weight.

#### Ride Defensively

Always pay attention to other vehicles around you, and do not assume that other drivers see you. Be prepared to stop quickly or perform an evasive maneuver.

## Safety Guidelines

### Scooter Safety

#### Make Yourself Easy to See

Make yourself more visible, especially at night, by wearing bright reflective clothing, positioning yourself so other drivers can see you, signaling before turning or changing lanes, and using your horn when necessary.

#### Ride within Your Limits

Never ride beyond your personal abilities or faster than conditions warrant. Fatigue and inattention can impair your ability to use good judgement and ride safely.

#### Don't Drink and Ride

Alcohol and riding don't mix. Even one alcoholic drink can reduce your ability to respond to changing conditions, and your reaction time gets worse with every additional drink. Don't drink and ride, and don't let your friends drink and ride either.


#### Keep Your Honda in Safe Condition

It's important to keep your scooter properly maintained and in safe riding condition. Inspect your scooter before every ride and perform all recommended maintenance. Never exceed load limits (➤ P. 17), and do not modify your scooter or install accessories that would make your scooter unsafe (➤ P. 16).

#### If You are Involved in a Crash

Personal safety is your first priority. If you or anyone else has been injured, take time to assess the severity of the injuries and whether it is safe to continue riding. Call for emergency assistance if needed. Also follow applicable laws and regulations if another person or vehicle is involved in the crash.

## Safety Guidelines

If you decide to continue riding, first turn the ignition switch to the  (Off) position, and evaluate the condition of your scooter. Inspect for fluid leaks, check the tightness of critical nuts and bolts, and check the handlebar, control levers, brakes, and wheels. Ride slowly and cautiously.

Your scooter may have suffered damage that is not immediately apparent. Have your scooter thoroughly checked at a qualified service facility as soon as possible.

### Carbon Monoxide Hazard

Exhaust contains poisonous carbon monoxide, a colourless, odorless gas. Breathing carbon monoxide can cause loss of consciousness and may lead to death.

If you run the engine in confined or even partly enclosed area, the air you breathe could contain a dangerous amount of carbon monoxide.

Never run your scooter inside a garage or other enclosure.

### **WARNING**

Running the engine of your scooter while in an enclosed or even partially enclosed area can cause a rapid build-up of toxic carbon monoxide gas.

Breathing this colourless, odorless gas can quickly cause unconsciousness and lead to death.

Only run your scooter's engine when it is located in a well ventilated area outdoors.

## Image Labels

## Image Labels

The following pages describe the label meanings. Some labels warn you of potential hazards that could cause serious injury. Others provide important safety information. Read this information carefully and don't remove the labels.

If a label comes off or becomes hard to read, contact your dealer for a replacement.

There is a specific symbol on each label. The meanings of each symbol and label are as follows.



Read instructions contained in Owner's Manual carefully.



Read instructions contained in Shop Manual carefully. In the interest of safety, take the scooter to be serviced only by your dealer.



### **DANGER (with RED background)**

You **WILL** be KILLED or SERIOUSLY HURT if you don't follow instructions.

### **WARNING (with ORANGE background)**

You **CAN** be KILLED or SERIOUSLY HURT if you don't follow instructions.

### **CAUTION (with YELLOW background)**

You **CAN** be HURT if you don't follow instructions.

## Image Labels

**BATTERY LABEL  
DANGER**

- Keep flame and spark away from the battery. Battery produce explosive gas that can cause explosion.
- Wear the eye protection and rubber gloves when handling the battery, or you can get burned or lose your eyesight by the battery electrolyte.
- Do not allow children and other people to touch a battery unless they understand proper handling and hazards of the battery very well.
- Handle the battery electrolyte with extreme care as it contains dilute sulfuric acid. Contact with your skin or eyes can burn you or cause loss of your eyesight.
- Read this manual carefully and understand it before handling the battery. Neglect of the instructions can cause personal injury and damage to the scooter.
- Do not use a battery with the electrolyte at or below the lower level mark. It can explode causing serious injury.

*Continued 7*

## Image Labels




### **RADIATOR CAP LABEL DANGER**

NEVER OPEN WHEN HOT.

Hot coolant will scald you.

Relief pressure valve begins to open at **108 kPa**.

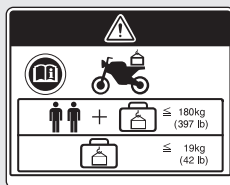


### **ACCESSORIES AND LOADING WARNING LABEL WARNING**

#### ACCESSORIES AND LOADING

- The safety stability and handling of this scooter may be affected by the addition of accessories and luggage.
- Read carefully the instructions contained in user's manual and installation guide before installing any accessory.
- The total weight of accessories and luggage added to rider's and passenger's weight should not exceed **180 kg (397 lb)**, which is the maximum weight capacity.
- The luggage weight must not exceed **19 kg (42 lb)** under any circumstances.
- The fitting of large fork-mounted or large handlebar mounted fairing is not recommended.

## Image Labels

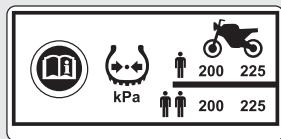

### TYRE INFORMATION LABEL

Cold tyre pressure:

[Driver only]

Front **200 kPa (2.00 kgf/cm<sup>2</sup>, 29 psi)**

Rear **225 kPa (2.25 kgf/cm<sup>2</sup>, 33 psi)**

[Driver and passenger]

Front **200 kPa (2.00 kgf/cm<sup>2</sup>, 29 psi)**

Rear **225 kPa (2.25 kgf/cm<sup>2</sup>, 33 psi)**

Scooter Safety



## Image Labels



or



### SAFETY REMINDER LABEL

For your protection, always wear helmet, protective apparel.

### FUEL LABEL

Unleaded petrol only

ETHANOL up to 10 % by volume



### CARGO LIMIT LABEL

Do not exceed **10 kg (22 lb)**.



### CARGO LIMIT LABEL

**V E, IV ED type only**

Do not exceed **5.0 kg (11.0 lb)**.



### CARGO LIMIT LABEL

Do not exceed **1.5 kg (3.3 lb)**.

## Safety Precautions

### Safety Precautions

- Ride cautiously and keep your hands on the handlebar and feet on the step board.
- Keep passenger's hands onto the grab rails or your waist, passenger's feet on the footpegs while riding.
- Always consider the safety of your passenger, as well as other drivers and riders.

#### Protective Apparel

Make sure that you and any passenger are wearing an approved motorcycle helmet, eye protection, and high-visibility protective clothing. Ride defensively in response to weather and road conditions.

#### ■ Helmet

Safety-standard certified, high-visibility, correct size for your head

- Must fit comfortably but securely, with the chin strap fastened.

- Face shield with unobstructed field of vision or other approved eye protection

#### **⚠ WARNING**

Not wearing a helmet increases the chance of serious injury or death in a crash.

Make sure that you and any passenger always wear an approved helmet and protective apparel.

#### ■ Gloves

Full-finger leather gloves with high abrasion resistance

#### ■ Boots or Riding Shoes

Sturdy boots with non-slip soles and ankle protection

#### ■ Jacket and Trousers

Protective, highly visible, long-sleeved jacket and durable trousers for riding (or a protective suit)

## Riding Precautions

### Scooter Safety

## Riding Precautions

### Running-in Period

During the first 500 km (300 miles) of running, follow these guidelines to ensure your scooter's future reliability and performance.

- Avoid full-throttle starts and rapid acceleration.
- Avoid hard braking.
- Ride conservatively.

### Brakes

Observe the following guidelines:

- Avoid excessively hard braking.
  - ▶ Sudden braking can reduce the scooter's stability.
  - ▶ Where possible, reduce speed before turning; otherwise you risk sliding out.
- Exercise caution on low traction surfaces.
  - ▶ The tyres slip more easily on such surfaces and braking distances are longer.
- Avoid continuous braking.
  - ▶ Repeated braking, such as when descending long, steep slopes can seriously overheat the brakes, reducing their effectiveness.
- For full braking effectiveness, operate both the front and rear brakes together.

## Riding Precautions

### Anti-lock Brake System (ABS)

This model is equipped with an Anti-lock Brake System (ABS) designed to help prevent the brakes from locking up during hard braking.

- ABS does not reduce braking distance. In certain circumstances, ABS may result in a longer stopping distance.
- ABS does not function at speeds below 5 km/h (3 mph).
- The brake levers may recoil slightly when applying the brakes. This is normal.
- Always use the recommended front/rear tyres to ensure correct ABS operation.

### Wet or Rainy Conditions

Road surfaces are slippery when wet, and wet brakes further reduce braking efficiency. Exercise extra caution when braking in wet conditions.

If the brakes get wet, apply the brakes while riding at low speed to help them dry.

### Parking

- Park on a firm, level surface.
  - If you must park on a slight incline or loose surface, park so that the scooter cannot move or fall over.
  - Make sure that high-temperature parts cannot come into contact with flammable materials.
  - Do not touch the engine, muffler, brakes and other high-temperature parts until they cool down.
  - To reduce the likelihood of theft, always lock the handlebar, lock the ignition switch (➤ P. 49) and leave your scooter while taking the Honda SMART Key with you. Deactivate the Honda SMART Key system if necessary. ➤ P. 44
- Use of an anti-theft device is also recommended.

## Riding Precautions

### **Parking with the Side Stand or Centre Stand**

1. Stop the engine.

#### **2. Using the side stand**

Push the side stand down.


Slowly lean the scooter to the left until its weight rests on the side stand.


#### **Using the centre stand**

To lower the centre stand, stand on the left side of the scooter.

Hold the left handle grip and the left grab rail.

Press down on the tip of the centre stand with your right foot and, simultaneously, pull up and back.

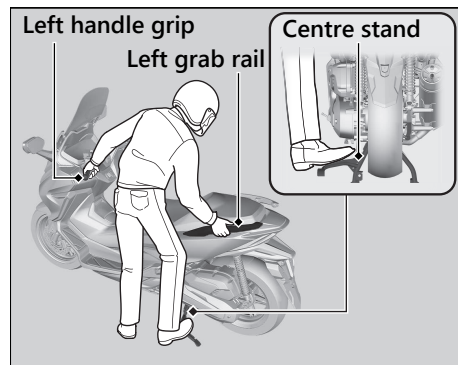


3. Turn the handlebar fully to the left.
  - Turning the handlebar to the right reduces stability and may cause the scooter to fall.
4. Turn the ignition switch to the  (Lock) position (▶ P. 42) and lock the ignition switch (▶ P. 49).

## Riding Precautions

### Refuelling and Fuel Guidelines

Follow these guidelines to protect the engine, fuel system and catalytic converter:

- Use only unleaded petrol.
- Use recommended octane number. Using lower octane petrol will result in decreased engine performance.
- Do not use fuels containing a high concentration of alcohol.  P. 140
- Do not use stale or contaminated petrol or an oil/petrol mixture.
- Avoid getting dirt or water in the fuel tank.

## Accessories & Modifications

### Scooter Safety

## Accessories & Modifications

We strongly advise that you do not add any accessories that were not specifically designed for your scooter by Honda or make modifications to your scooter from its original design. Doing so can make it unsafe. Modifying your scooter may also void your warranty and make your scooter illegal to operate on public roads and highways. Before deciding to install accessories on your scooter be certain the modification is safe and legal.

### **⚠ WARNING**

Improper accessories or modifications can cause a crash in which you can be seriously hurt or killed.

Follow all instructions in this owner's manual regarding accessories and modifications.

Do not pull a trailer with, or attach a sidecar to, your scooter. Your scooter was not designed for these attachments, and their use can seriously impair your scooter's handling.

## Loading

### Loading

- Carrying extra weight affects your scooter's handling, braking and stability. Always ride at a safe speed for the load you are carrying.
- Avoid carrying an excessive load and keep within specified load limits.

**Maximum weight capacity / Maximum luggage weight** ■ P. 142

- Tie all luggage securely, evenly balanced and close to the centre of the scooter.
- Do not place objects near the lights or the muffler.

### **WARNING**

Overloading or improper loading can cause a crash and you can be seriously hurt or killed.

Follow all load limits and other loading guidelines in this manual.


Scooter Safety



# Basic Operation Flow

## Pre-ride Inspection ➡ P.74

Carefully inspect your scooter to make sure that it is safe to ride.

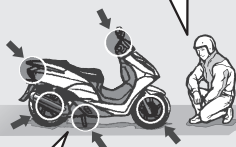

## Acceleration ➡ P.59

Apply throttle gradually.  
Obey the speed limit.



How to use basic features.

- Instruments ➡ P.22
- Indicators ➡ P.38
- Switches ➡ P.40
- Steering Lock ➡ P.42
- Idling Stop System ➡ P.53
- Answer Back System ➡ P.51
- Honda SMART Key System ➡ P.43

## Starting the Engine ➡ P.56

Start and warm the engine.  
Avoid revving the engine.



## Starting the Scooter ➡ P.59

Before pulling away, indicate your direction with the turn signal switch, and check for oncoming traffic.



## Braking ➡ P.60

### STOP!



Close the throttle and apply the front and rear brakes together.

▶ The brakelight will indicate that you have applied the brakes.

## Stopping

If pulling off the road, signal early enough to show traffic that you are pulling over, and pull over smoothly.



## Turning Corners

Do your braking before entering corners.



Gradually reapply throttle when exiting turn.

## Parking ➡ P.13


Park on a firm level surface. Use the stand, and lock the steering.




## Refuelling ➡ P.61




# Parts Location

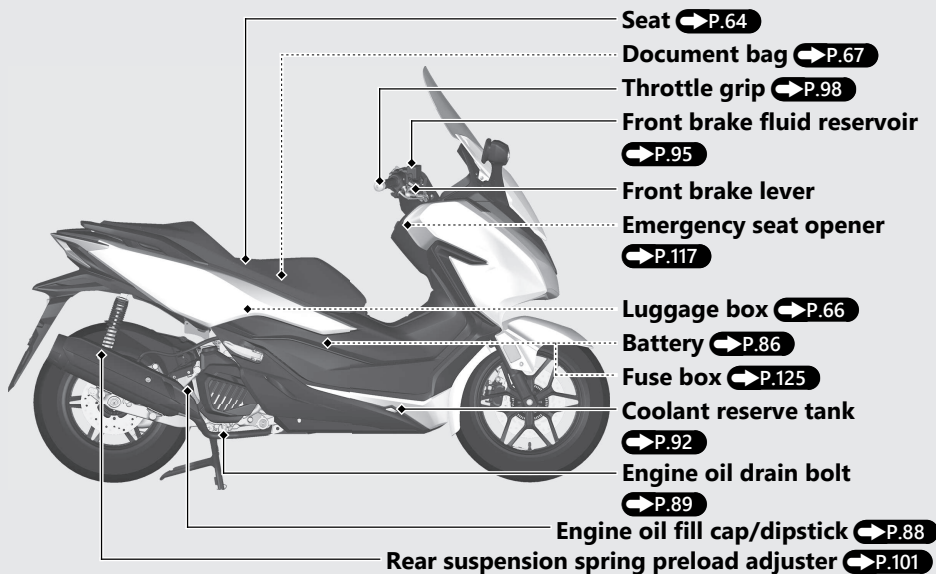

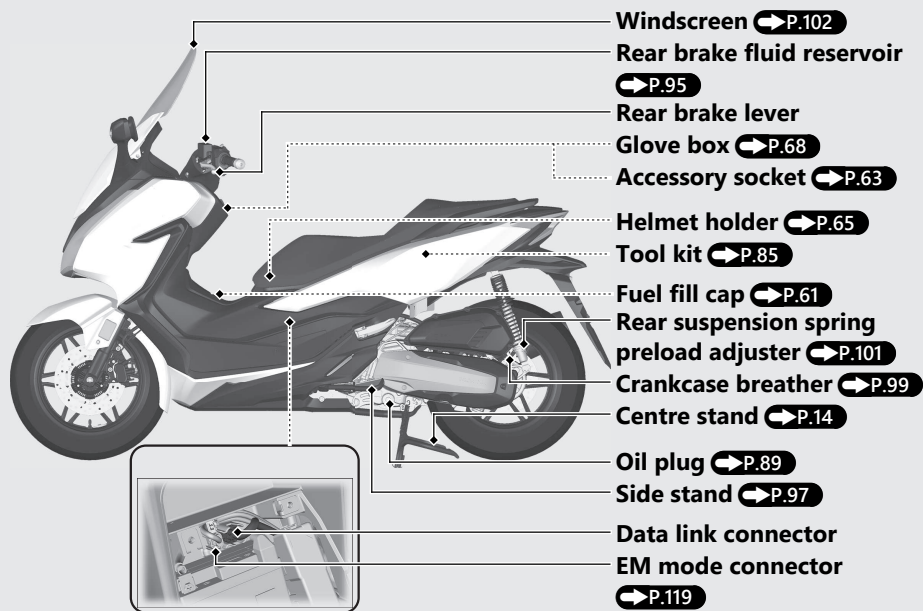

# Instruments

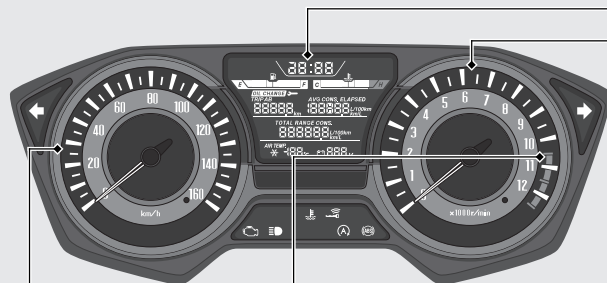

## Speedometer

This shows your speed in kilometer per hour (km/h) and/or miles per hour (mph) depend on type.

## Display Check


When the ignition switch is turned to the **I** (On) position, the speedometer and tachometer needles swing to the maximum scale on the dial once, all the mode and digital segments will show. If any part of these displays does not come on when it should, have your dealer check for problems.

## Tachometer

### NOTICE


Do not operate the engine in the tachometer red zone. Excessive engine speed can adversely affect engine life.

**Tachometer red zone**  
(excessive engine rpm range)

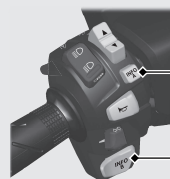

INFO A button

INFO B button

 Fuel gauge ➡P.29

### **OIL CHANGE**

Oil change indicator ➡P.30 /

➡ Maintenance indicator ➡P.31

Tripmeter [TRIP A/B]

➡P.25

Air temperature gauge

[AIR TEMP.] ➡P.29

Odometer [TOTAL] ➡P.25 /


Available driving distance [RANGE] ➡P.27 /

Current fuel mileage [CONS.] ➡P.25

Clock

Clock setting: ➡P.34

 Coolant temperature gauge ➡P.29

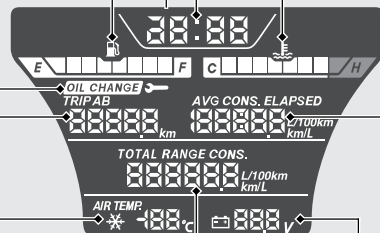

Average fuel mileage

[AVG CONS.] ➡P.26 /

Elapsed time


[ELAPSED] ➡P.27

 Battery voltage meter ➡P.29

## Instruments (Continued)


### Switching the Display

The **INFO A** button switches between the tripmeter A and tripmeter B. Also **INFO A** button switches between the average fuel mileage and elapsed time.

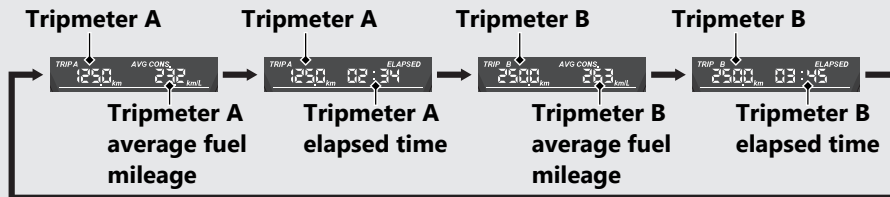

→ Press the **INFO A** button

The **INFO B** button switches among the odometer, available driving distance and current fuel mileage.

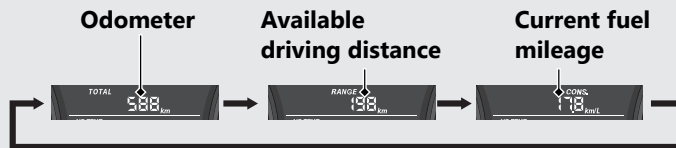

→ Press the **INFO B** button

**| Odometer [TOTAL]**

Total distance ridden.

When "-----" is displayed, go to your dealer for service.

**| Tripmeter [TRIP A/B]**

Distance ridden since tripmeter A or tripmeter B respectively were reset.

When "-----." is displayed, go to your dealer for service.

**To reset the tripmeter:** ➡ P.28

**| Current fuel mileage [CONS.]**

Displays the current or instant fuel mileage.

Display range: 0.0 to 299.9 km/L (L/100km, mile/gal or mile/L).

- When your speed is less than about 5 km/h (3 mph): "---." is displayed.
- If the calculated value is 299.9 km/L (L/100km, mile/gal or mile/L) or more: "299.9 km/L (L/100km, mile/gal or mile/L)" is displayed.

When "---." is displayed except for the above-mentioned cases, go to your dealer for service.



## Instruments *(Continued)*

### Average fuel mileage [AVG CONS.]

Displays the average fuel mileage since the selected tripmeter was reset.

The average fuel mileage will be calculated based on value displayed on the tripmeter (A or B) selected.

Display range: 0.0 to 299.9 km/L (L/100km, mile/gal or mile/L).

- Initial display: "---.-" is displayed.
- If the calculated value is 299.9 km/L (L/100km, mile/L or mile/gal) or more: "299.9 km/L (L/100km, mile/gal or mile/L)" is displayed.
- When the average fuel mileage is reset: "---.-" is displayed.

When "---.-" is displayed except for the above-mentioned cases, go to your dealer for service.

**To reset the average fuel mileage:**

➡ P.28

**Elapsed time [ELAPSED]**

Displays the elapsed time during the engine running since the selected tripmeter was reset.

Display range: 00:00 to 199:59  
(hours:minutes)

- The elapsed time return to 00:00 when the readout exceeds 199:59.

**To reset the elapsed time:**  **P.28**

**Available driving distance [RANGE]**

Displays the estimated distance you can travel on the remaining fuel. The indicated available driving distance is calculated based on the driving conditions, and the indicated figure may not always be the actual available distance.


- Initial display: "---" is displayed.
- When the calculated distance is below 5 km (3 mile) or the amount of remaining fuel is below 1.0 litres (0.26 US gal, 0.22 Imp gal): "---" is displayed.

When "---" is displayed except for the above-mentioned cases, go to your dealer for service.


## Instruments (Continued)

### To reset the tripmeter, average fuel mileage and elapsed time

To reset tripmeter A, average fuel mileage and elapsed time (these are based on tripmeter A) together, press and hold the **INFO A** button while tripmeter A is displayed.

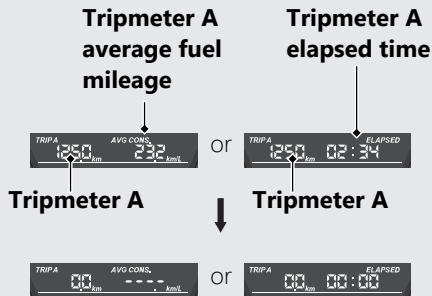

To reset tripmeter B, average fuel mileage and elapsed time (these are based on tripmeter B) together, press and hold the **INFO A** button while tripmeter B is displayed.

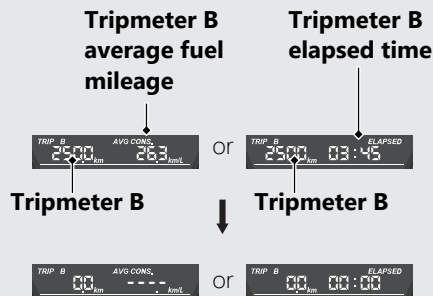

### **Coolant temperature gauge**

When the coolant is over specified temperature, the segment H flashes and high coolant temperature indicator comes on.

**If it comes on while riding:** ➡ P.107

### **Fuel gauge**

Remaining fuel when there is only 1st (E) segment: approximately 1.8 L (0.48 US gal, 0.40 Imp gal).

This segment flashes when the fuel decreases further.



**If the fuel gauge indicator flashes in a repeat pattern or turns off:** ➡ P.111

### **Air temperature gauge**

Shows ambient temperature.

Display range: -10 to 50°C

- Below -10°C: "---" is displayed
- Above 50°C: 50°C flashes

❄ comes on when air temperature is below 3°C, and goes off when air temperature reaches 5°C after ❄ comes on. The temperature readout may be incorrect at low speeds due to reflected heat.

### **Battery voltage meter**

Displays the current voltage.

## Instruments *(Continued)*

### Oil change indicator

The indicator is turned on whenever the running distance reaches the programed oil change interval.

When the oil change indicator is appeared, reset the indicator after changing the engine oil. ➡ **P.89**

▶ The indicator does not go off until it is reset.

#### ED, II ED, IV ED type

▶ The oil change indicator is appeared for the first time when the running distance reaches 1,000 km.

▶ The oil change indicator is appeared when the running distance reaches every 6,000 km after the first indication was reset.

#### E, III E, V E type

▶ The oil change indicator is appeared for the first time when the running distance reaches 600 mile (960 km).

▶ The oil change indicator is appeared when the running distance reaches every 4,000 mile (6,400 km) after first indication was reset.

### Oil change indicator



If the oil is changed before the oil change indicator comes on, be sure to reset the oil change indicator after changing the oil.

**To reset the oil change indicator** ➡ **P.32**

You can also check the remaining distance to next interval of the oil change.

**To check the remaining distance** ➡ **P.32**

## Maintenance indicator

The indicator is turned on whenever the running distance reaches the programed maintenance interval.

When the maintenance indicator is appeared, reset the indicator after performing the periodic maintenance. ➡ **P.71**

▶ The indicator does not go off until it is reset.

### ED, II ED, IV ED type

▶ The maintenance indicator is appeared for the first time when the running distance reaches 1,000 km.

▶ The maintenance indicator is appeared when the running distance reaches every 6,000 km after first indication was reset.

### E, III E, V E type

- ▶ The maintenance indicator is appeared for the first time when the running distance reaches 600 mile (960 km).
- ▶ The maintenance indicator is appeared when the running distance reaches every 4,000 mile (6,400 km) after first indication was reset.

## Maintenance indicator



If the periodic maintenance is performed before the maintenance indicator comes on, be sure to reset the maintenance indicator after performing the periodic maintenance.

## To reset the maintenance indicator

➡ **P.32**

You can also check the remaining distance to next interval of the maintenance.


## To check the remaining distance ➡ **P.32**

*Continued* 31

## Instruments *(Continued)*

### To check the remaining distance

You can check the remaining distance to next interval of the oil change and maintenance. When the **[INFO A]** button and **[INFO B]** button are pressed at the same time, each remaining distance appears briefly.

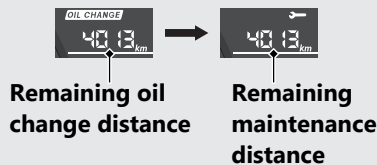

### To reset the oil change indicator and maintenance indicator

- 1 Press and hold the **[INFO A]** button and **[INFO B]** button while turning the ignition switch to the **I (On)** position and keep holding the **[INFO A]** button and **[INFO B]** button until the oil change indicator and remaining distance start flashing.
  - The button is not pressed for about 30 seconds, the control is automatically switched the ordinary display.



2 Press the **[INFO B]** button.

The oil change indicator and remaining distance are reset, then the maintenance indicator and remaining distance start flashing after next interval of the oil change is appeared briefly.

- If the oil change indicator and remaining distance are not to be reset, press the **[INFO A]** button.



3 Press the **[INFO B]** button.

The maintenance indicator and remaining distance are reset, then the display will return to the ordinary display after next interval of the maintenance is appeared briefly.

- If the maintenance indicator and remaining distance are not to be reset, press the **[INFO A]** button.





## Instruments (Continued)

### Display Setting


Following items to change sequentially.

- Time format setting
- Clock setting
- Backlight brightness adjustment
- **E, III E, V E type only**  
Changing of mileage unit
- Changing of fuel mileage meter unit

If the ignition switch is turned to the **○** (Off) position or the button is not pressed for about 30 seconds, the control is automatically switched from the setting mode to the ordinary display.

If the button is not pressed for about 30 seconds items in the process of being set will be discarded and only items where settings have been finalized will be applied.

Only if the ignition switch is turned to the **○** (Off) position will items in the process of being set and those that are finalized be applied.

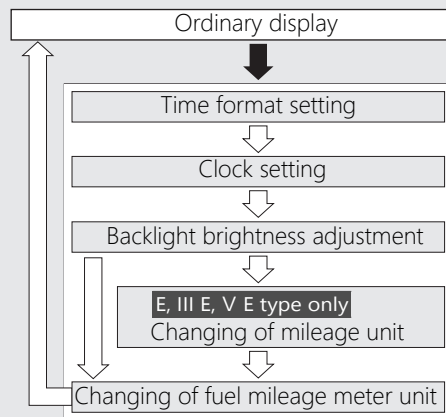


➡ Press and hold **INFO A** button and **INFO B** button

➡ Press the **INFO B** button

## 1 Time format setting:

You can switch the time format between 12 hour format or 24 hour format.

- ① Turn the ignition switch to the **I** (On) position.
- ② Press and hold the **INFO A** button and **INFO B** button, the current time format start flashing.



- ③ Press the **INFO A** button to select "12 hr" or "24 hr".




- ④ Press the **INFO B** button. The time format is set, and then the display moves to the clock setting.

## 2 Clock setting:

- ① Press the **INFO A** button until the desired hour is displayed.

▶ Press and hold the **INFO A** button to advance the hour fast.



- ② Press the **INFO B** button. The minute digits start flashing.



- ③ Press the **INFO A** button until the desired hour is displayed.

▶ Press and hold the **INFO A** button to advance the minute fast.



## Instruments (Continued)

- ④ Press the **INFO B** button. The clock is set, and then the display moves to the backlight brightness adjustment.

### 3 Backlight brightness adjustment:

You can adjust the brightness to one of five levels.

- ① Press the **INFO A** button. The brightness is switched.



- ② **E, III E, V E type**

Press the **INFO B** button. The backlight is set, and then the display moves to the changing of the mileage unit.

**ED, II ED, IV ED type**

Press the **INFO B** button. The backlight is set, and then the display moves to the changing of the fuel mileage meter unit.

### 4 Changing of mileage unit:

**E, III E, V E type only**

- ① Press the **INFO A** button to select either "km" or "mile".
- ② Press the **INFO B** button. The mileage unit is set, and then the display moves to the changing of the fuel mileage meter unit.



## 5 Changing of fuel mileage meter unit:

- 1 Press the **INFO A** button to select "L/100km" or "km/L".



### E, III E, V E type only


If the "mile" for mileage is selected, the fuel mileage shown by "mile/gal" or "mile/L".



- 2 Press the **INFO B** button. The fuel mileage meter unit is set, and then the display will return to the ordinary display.

# Indicators

If one of these indicators does not come on when it should, have your dealer check for problems.

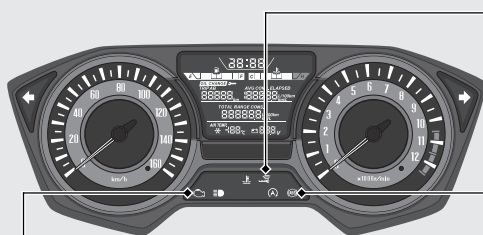

## **PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)**

Comes on briefly when the ignition switch is turned to the **I** (On) position.

**If it comes on while engine is running:**

**➡ P.108**



## **Honda SMART Key Indicator**

Comes on when vehicle and Honda SMART Key verification is complete, and the ignition switch can be operated.

Goes off when the ignition switch is turned to the **I** (On) position.


**When the Honda SMART Key indicator flashes:** ➡ **P.110**




## **ABS (Anti-lock Brake System) indicator**

Comes on when the ignition switch is turned to the **I** (On) position. Goes off when your speed reaches approximately 5 km/h (3 mph)

**If it comes on while riding:** ➡ **P.109**

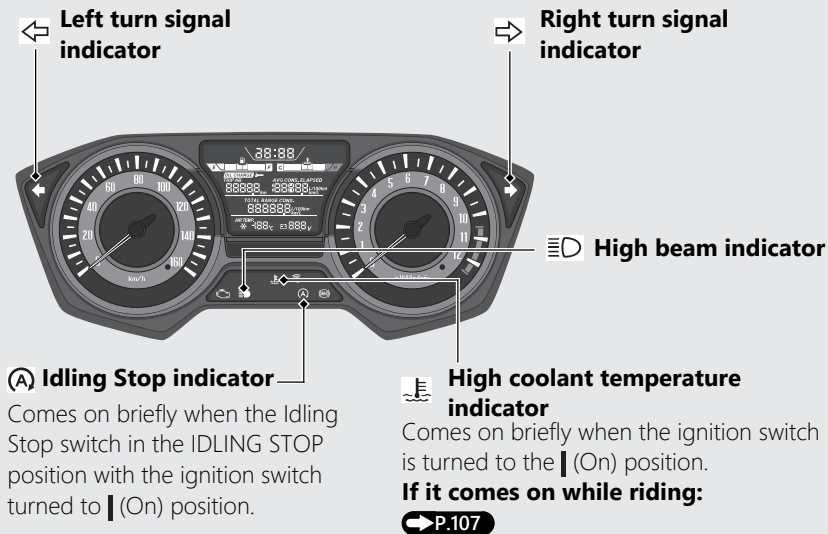

# Switches

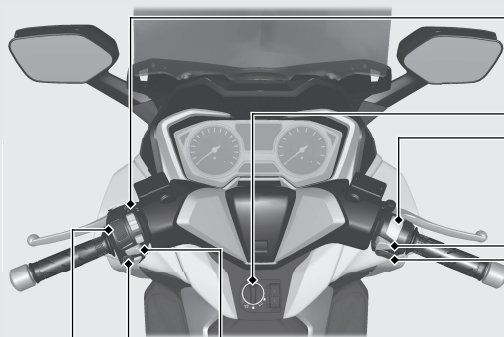

**Horn button**



**Turn signal switch**

► Pressing the switch turns the turn signal off.

## **Headlight dimmer switch/ Passing light control switch**

- : High beam
- : Low beam
- **PASS** : Flashes the high beam headlight.

## **Idling Stop switch**

Switches the Idling Stop system on/off.

- **IDLING STOP** : The Idling Stop system is on.
- **IDLING** : The Idling Stop system is off.

**Idling Stop system:** **P.53**



**Hazard switch**

Switchable when the ignition switch is in the (On) position.



**Start button**

### **Windscreen adjusting switch**

Push up or down to adjust the windscreen height. ➡ **P.102**

### **Ignition switch**

Switches the electrical system on/off, locks the steering and glove box, and operates the fuel lid and seat opener switch.

#### **To unlock the ignition switch:**

➡ **P.48**

#### **| (On)**

Turns electrical system on for starting/riding.

#### **SEAT FUEL**


Operates the fuel lid and seat opener switch.

#### **○ (Off)**

Turns engine off.

#### **🔒 (Lock)**

Locks steering and glove box.

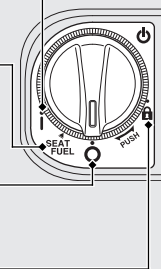




## Switches *(Continued)*

### Steering Lock

Lock the steering when parking to help prevent theft.

A U-shaped wheel lock or similar device is also recommended.

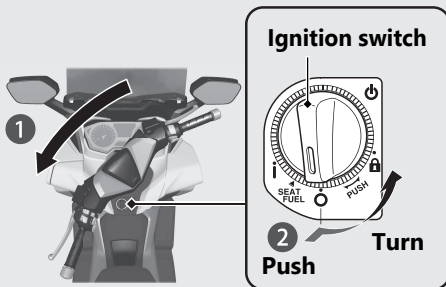

### Locking

- ① Turn the handlebar all the way to the left or right.
- ② Push the ignition switch down, and turn it to the **i** (Lock) position.
  - ▶ To unlock the ignition switch ➡ **P.48**
  - ▶ Jiggle the handlebar if the lock is difficult to engage.
- ③ Lock the ignition switch. ➡ **P.49**

### Unlocking

Push the ignition switch down, and turn it to the **O** (Off) position.

- ▶ To unlock the ignition switch ➡ **P.48**

# Honda SMART Key System

The Honda SMART Key system allows you to operate the main switch without inserting a key into a keyhole.

The system runs a two-way authentication between the scooter and the Honda SMART Key to verify if it is the registered Honda SMART Key.

The Honda SMART Key system uses low-intensity radio waves. It may affect medical equipment such as a cardiac pacemakers.

## Honda SMART Key System *(Continued)*

### Switching the Honda SMART Key System

#### **To switch the Honda SMART Key system to activation or deactivation**

Press the ON/OFF button until the LED colour of the Honda SMART Key changes.


#### **To check the Honda SMART Key system status**

Lightly press the ON/OFF button. The LED of the Honda SMART Key will show the status.

When the LED of the Honda SMART Key is:

Green: Honda SMART Key system authentication can be performed.

Red: Honda SMART Key system authentication can not be performed.

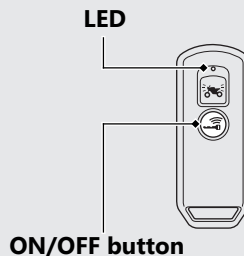

## Operating Range


The operating range varies when the ignition switch is locked or unlocked.

The Honda SMART Key system uses low-intensity radio waves. Therefore the operating range may become wider or narrower, or the Honda SMART Key system may not work properly in the following environments.

- When the Honda SMART Key battery is depleted.
- When there are facilities nearby that generate strong radio waves or noise such as TV towers, power stations, radio stations, or airports.
- When you carry the Honda SMART Key with a laptop or wireless communication device such as a radio or mobile phone.
- When the Honda SMART Key comes into contact with or is covered by metal objects.

## When the ignition switch is unlocked:

The system can be operated within the shaded area shown in the illustration.

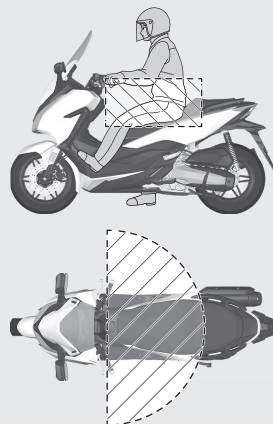


## Honda SMART Key System *(Continued)*

### When the ignition switch is locked:


The system can be operated within the shaded area shown in the illustration.

About 2 m (6.6 ft)

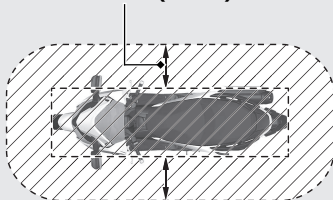

Anyone can unlock the ignition switch and start the engine if your Honda SMART Key is within operating range of your scooter, even if you are on the other side of a wall or window. If you are away from your scooter but your Honda SMART Key is still within operating range, deactivate the Honda SMART Key system.

**To switching the Honda SMART Key system** ➡ P.44

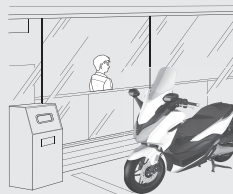

Anyone in possession of the Honda SMART Key can perform the following operations if the Honda SMART Key is within operating range:

- Starting the engine
- Unlocking the ignition switch
- Releasing the seat lock
- Opening the fuel lid
- Unlocking the steering lock

You should always keep the Honda SMART Key on your person after you get on and off the scooter or while riding.

Do not place the Honda SMART Key in the luggage box or glove box.

If the ignition switch is in the **I** (On) position, the scooter can be operated even by a person who does not have a verified Honda SMART Key.

Whenever you leave your scooter, lock the steering and lock the ignition switch. **➡** P. 49  
Make sure the ignition switch ring goes off and all turn signals flash once at this time.

## Honda SMART Key System (Continued)


### Switching the ignition switch

#### 1 To Unlock the Ignition Switch

- 1 Make sure that the Honda SMART Key is activated. ➡ P.44
- 2 To authenticate the Honda SMART Key system, push the ignition switch.
  - ▶ When properly authenticated and the ignition switch is unlocked, the Honda SMART Key indicator and ignition switch ring come on.
- 3 Turn the ignition switch to the **I** (On) position while the Honda SMART Key indicator comes on.
  - ▶ If you do not turn the ignition switch to the **I** (On) position within 20 seconds after pushing in the ignition switch in, the Honda SMART Key indicator and ignition switch ring will go off, the turn signals flash 1 time, and then the ignition switch will be locked.

### When the Honda SMART Key system does not work properly ➡ P.115



If someone without the Honda SMART Key tries to turn the ignition switch, the ignition switch rotates freely. If you notice the ignition switch is in a different position, turn the ignition switch to the original position (O (Off) or **L** (Lock)).

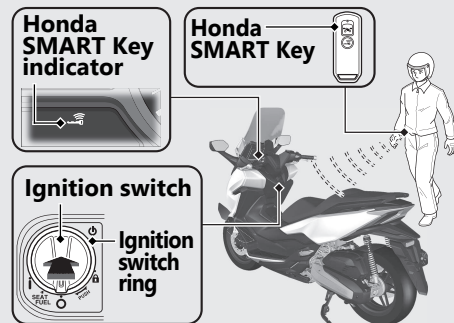

## To Lock the Ignition Switch



- 1 Turn the ignition switch to the SEAT FUEL, ○ (Off) or 🔒 (Lock) position.
- 2 Lock the ignition switch by doing one of the following:
  - Leave the operating range with the Honda SMART Key. ➡ P.45
  - Push the ignition switch.
  - Wait for approximately 20 seconds after turning the ignition switch from | (On) to SEAT FUEL, ○ (Off) or 🔒 (Lock).
  - Switch the Honda SMART Key system to deactivation. ➡ P.44
- 3 Make sure that the Honda SMART Key indicator and ignition switch ring go off, the turn signals flash once. This indicates that the ignition switch is locked.

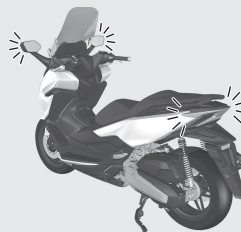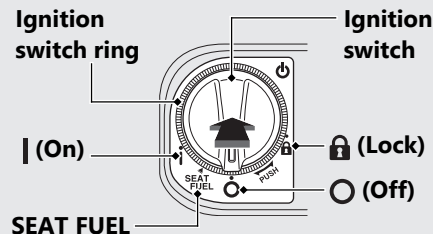
## When the Honda SMART Key system does not work properly ➡ P.115








## **Honda SMART Key System** *(Continued)*

Always make sure the ignition switch position is in the  (Off) or  (Lock) position when you leave your scooter.


When the ignition switch is locked in the SEAT FUEL position, the ignition switch can be turned to the  (Off) position only once.

When the ignition switch is locked in the  (Off) position, the steering cannot be locked. To lock the steering, unlock the ignition switch.

# Answer Back System

The answer back system is a device to find the position of your scooter and to inform you that the immobilizer function of the HONDA SMART key system is activated. When you press the answer back button on the Honda SMART Key with the ignition switch  (Off) or  (Lock) position, your scooter informs you of its location and activation of the immobilizer function by blinking the turn signal light, and lighting the ignition switch ring. The ignition switch ring will light for about 1 minute.

The answer back system uses low-intensity radio waves. It may affect medical equipment such as a cardiac pacemaker.

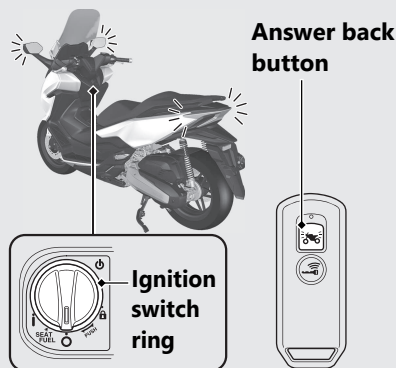

## Answer Back System *(Continued)*

### Operation

Press the answer back button on the Honda SMART Key.

- ▶ The answer back system will not function when the ignition switch is in the **I** (On) position.

If the ignition switch is left the **O** (Off) or **i** (Lock) position for more than 10 days, the answer back system will no longer operate.

During the system is activating, when the scooter receives a signal by pressing the answer back button, the system activation will be extended for 10 days.

To reset the system, unlock the the ignition switch and turn the ignition switch **I** (On) position once.

- ▶ To unlock the ignition switch ➡ **P.48**

#### NOTICE

When the battery in the scooter is weak, the answer back system may not function.

# Idling Stop System

Idling Stop system is designed to help reduce the fuel consumption and noise, by idling stop while making a stop such as waiting at an intersection.

## Switching the Idling Stop System On or Off

Switches the Idling Stop system on or off using the Idling Stop switch.

### • ON: **IDLING STOP**

- ▶ Idling Stop indicator comes on when the Idling Stop system becomes ready to stop the engine while riding. Idling Stop indicator flashes when the engine is stopped by the Idling Stop system.

### • OFF: **IDLING**

- ▶ Idling Stop indicator does not come on when the Idling Stop system is off.


## Activation of the Idling Stop System

The Idling Stop system becomes ready to stop the engine and Idling Stop indicator comes on when the following requirements are satisfied with the Idling Stop switch in the IDLING STOP position:

- Started the engine by the start button.
- Warmed up the engine enough
- Ridden the scooter at speed over 10 km/h (6 mph).

## Idling Stop Indicator Does Not Come On: **←P.112**

### Idling Stop switch

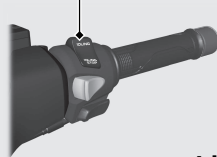


**Idling Stop indicator**

## Idling Stop System *(Continued)*

### Stopping the engine by the Idling Stop System

The engine stops and Idling Stop indicator changes to flash after you close the throttle completely and stop the scooter while the Idling Stop indicator is on.

- ▶ While the engine is stopped by the Idling Stop system, if you press the Idling Stop switch to IDLING, the Idling Stop system will be cancelled. The engine will not restart even when you open the throttle.

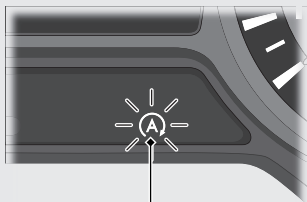

**Idling Stop indicator**

### Safety Precaution for the Idling Stop System

Do not go away from the scooter while the Idling Stop indicator is flashing. When you go away from the scooter, always turn the ignition switch to the **○** (Off) position.

- ▶ The engine may start unexpectedly if the throttle is opened.

**Engine is Not Stopped by the Idling Stop System While the Idling Stop Indicator is On:** **▶ P.113**

#### **NOTICE**

Stopping by the Idling Stop system for a long time may cause battery discharge.

### Restarting the Engine

Check that the Idling Stop indicator is flashing, and then open the throttle.

- ▶ If it is not flashing, you can't restart the engine with the Idling Stop system, even if you open the throttle.
- ▶ While the engine is stopped by the Idling Stop system, if you operate the side stand, the flashing Idling Stop indicator turns off or stops flashing and stays on, then the engine will not restart even when you open the throttle.

**Engine Does Not Start Even If the Throttle is Opened:** ➡P.114

#### NOTICE

Headlight stays on after the engine is stopped by the Idling Stop system. The battery may discharge and you may not be able to restart engine.

When the battery is weak, switch the Idling Stop switch to IDLING and do not to use the Idling Stop system. See your dealer to check the battery.

See your dealer for checking the battery as specified in the maintenance schedule.

**Maintenance Schedule:** ➡P.71

# Starting the Engine

Start your engine using the following procedure, regardless of whether the engine is cold or warm.

This scooter is equipped with a side stand ignition cut-off system.


- ▶ If the side stand is down, the engine cannot be started.
- ▶ If you lower the side stand with the engine running, it will automatically shut off.

This scooter is equipped with a Honda SMART Key system. Always keep Honda SMART Key on you when you ride the scooter. ➡ **P.45**


## NOTICE

- If the engine does not start within 5 seconds, turn the ignition switch to the **○** (Off) position and wait 10 seconds before trying to start the engine again to recover battery voltage.
- Extended fast idling and revving the engine can damage the engine, and the exhaust system.
- The engine will not start if the throttle is fully open.
- If the scooter is over-turned, you must first turn the ignition switch to the **○** (Off) position and then inspect the scooter carefully.


- 1 Place the scooter on its centre stand.
- 2 Turn the ignition switch to the **I** (On) position.  
 ► To unlock the ignition switch. ➡ **P.48**

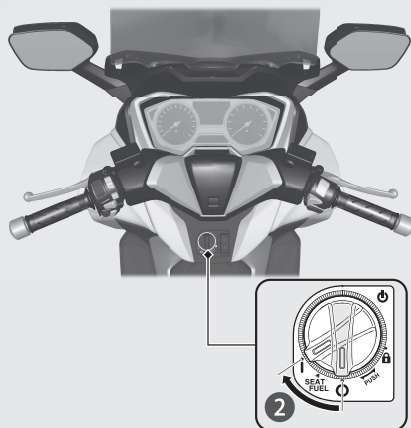

- 3 Squeeze the rear brake lever.  
 ► The starter motor will only work when the rear brake lever is squeezed and the side stand is up.

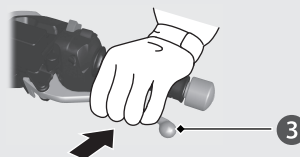

- 4 Press the start button with the throttle completely closed. Release the start button as soon as the engine starts.

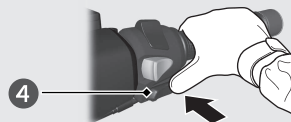

Continued 57




## Starting the Engine *(Continued)*

### If you cannot start the engine:

- ① Place the scooter on its centre stand and squeeze the rear brake lever.
- ② With the throttle slightly open (about 3 mm (0.1 in), without freeplay), press the start button.

**About 3 mm (0.1 in), without freeplay**

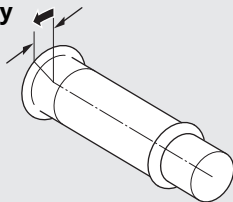

### If the engine does not start:

- ① Open the throttle fully and press the start button for 5 seconds.
- ② Repeat the normal starting procedure.
- ③ If the engine starts, open the throttle slightly if idling is unstable.
- ④ If the engine does not start, wait 10 seconds before trying steps ① & ② again.

**If Engine Will Not Start** ➡ P.106

# Riding

## Starting the Scooter


- 1 Push the scooter forward off the centre stand.

- ▶ Squeeze the rear brake lever.
- ▶ Keep throttle closed.

Make sure the side stand and centre stand are up.

- 2 Get on the scooter.
  - ▶ Mount the scooter from the left side, keeping at least one foot on the ground.
- 3 Release the brake lever.


- 4 Acceleration and deceleration  
To accelerate: Open the throttle slowly.  
To decelerate: Close the throttle.

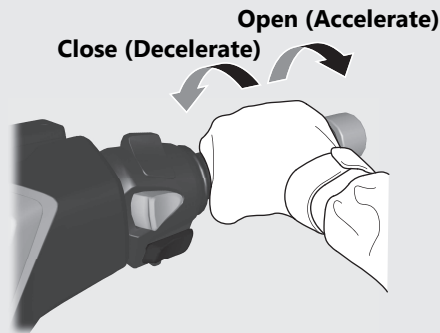

## **Riding** *(Continued)*

### **Braking**

Close the throttle and apply the front and rear brake levers together.

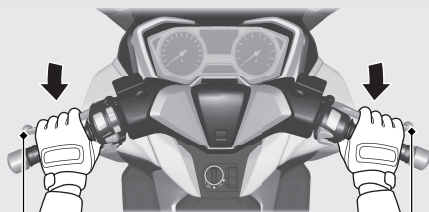

# Refuelling

**Fuel type:** Unleaded petrol only


**Fuel octane number:** Your scooter is designed to use Research Octane Number (RON) 91 or higher.

**Tank capacity:** 11.5 L (3.04 US gal, 2.53 Imp gal)

**Refuelling and Fuel Guidelines** ➡ P.15

## Opening the Fuel Fill Cap


- 1 Turn the ignition switch to the position of SEAT FUEL.  
▶ To unlock the ignition switch ➡ P.48
- 2 Push the FUEL side of the fuel lid and seat opener switch.  
▶ The fuel lid opens.

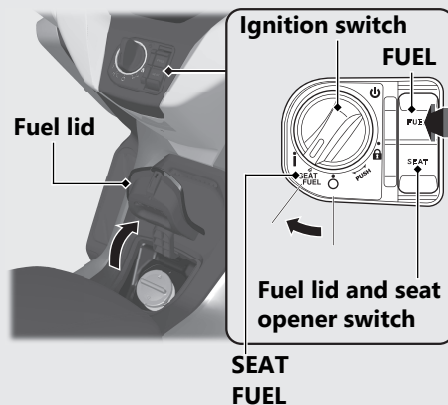

## Refuelling *(Continued)*

- ③ Turn the fuel fill cap counterclockwise and remove the fuel fill cap.

**Fuel fill cap**

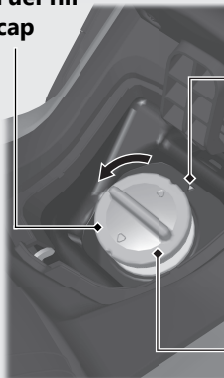

**Arrow marks**



**Lower edge of filler neck**



Do not fill with fuel above the lower edge of the filler neck.

## Closing the Fuel Fill Cap

- ① Install and tighten the fuel fill cap firmly by turning it clockwise.
- ▶ Make sure that the arrow marks on the fuel fill cap and fuel tank are aligned.
- ② Close the fuel lid until it locks.
- ▶ Make sure that the fuel lid is closed securely.

## **⚠ WARNING**

Petrol is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Stop the engine, and keep heat, sparks, and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.

## Accessory Socket


The accessory socket is located in the glove box.

Use accessory devices at your own risk. In no event shall Honda be liable for any damages to your accessory device when in use.

Open the cover to access the socket.

Rated capacity is

**12 W (12 V, 1 A).**

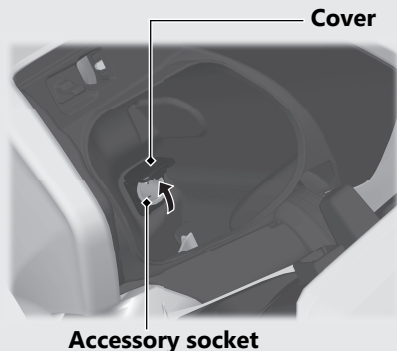


- ▶ To prevent the battery from becoming weak (or dead), keep the engine running while drawing current from the socket.
- ▶ Set the headlight on low beam while the socket is in use. The battery may run down or cause damage to the socket.
- ▶ To prevent entry of foreign matter into the socket, be sure to close the cover when the socket is not used.

### NOTICE

- Using any heat-generating accessory or improperly rated accessory can damage the socket.
- Do not use the socket in wet conditions, when or while washing or any other wet conditions as these will damage the socket.

**Opening the Glove Box** ➡ P.68

# Storage Equipment

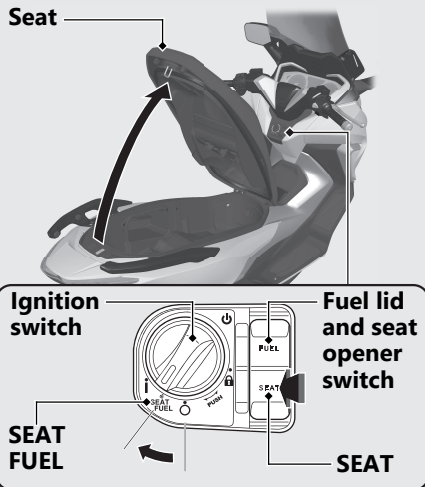

## Seat Open


- ① Turn the handlebar pointed straight ahead.
- ② Turn the ignition switch to the position of SEAT FUEL.  
▶ To unlock the ignition switch ➔ **P.48**
- ③ Push the SEAT side of the fuel lid and seat opener switch.
- ④ Open the seat.

## Seat Close

Close and push down on the rear of the seat until it locks. Make sure that the seat is locked securely by pulling it up lightly. Take care not to lock your key in the compartment under the seat.

## Helmet Holder

The helmet holder is located under the seat.  
A helmet set wire is in the tool kit.

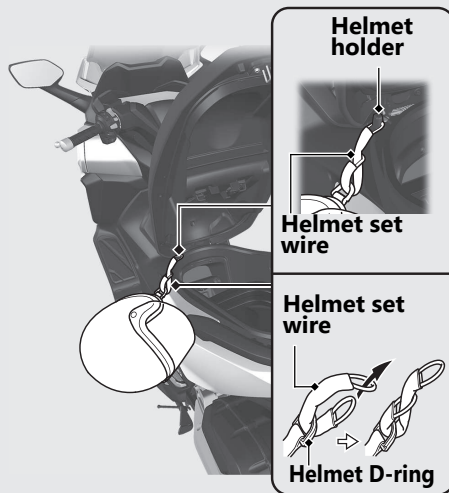

► Use the helmet holder only when parked.

**Opening the seat** ➡ P.64

## ⚠ WARNING

Riding with a helmet attached to the holder can interfere with the rear wheel or suspension and could cause a crash in which you can be seriously hurt or killed.

Use the helmet holder only while parked. Do not ride with a helmet secured by the holder.




## Storage Equipment *(Continued)*

### Luggage Box

Two helmets can be stored in the luggage box. Set the helmets as shown.

- Some helmets may not fit in the compartment due to their size or design.

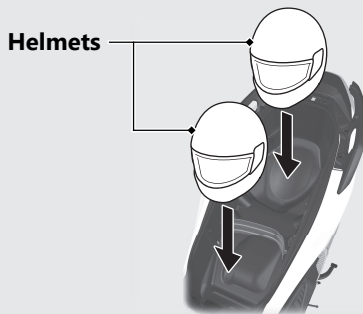

Never exceed the maximum weight limit.

### Maximum Weight: 10 kg (22 lb)


- Do not store any items that are flammable or susceptible to heat damage.
- Do not store valuables or fragile articles.

### Opening the seat ➡ P.64

Position of the partition board can be changed into three places as shown.

- Install the partition board securely in the grooves on the luggage box.

#### Partition board (Position 1)

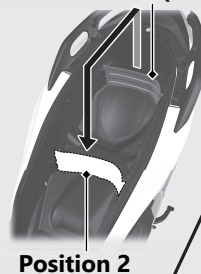


#### Partition board (Position 2)



### Tool Kit/Document Bag

The tool kit is located in the left side of the luggage box.

The document bag is located in the reverse side of the seat.

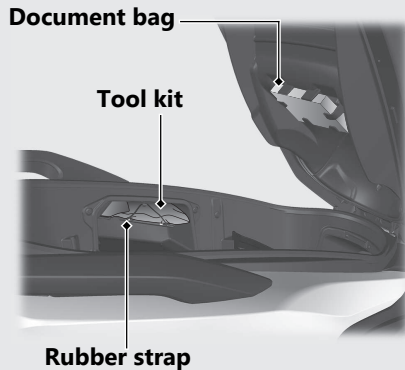


**Opening the seat** ➡ P.64

### Rear Carrier

**V E, IV ED type only**

Never exceed the maximum weight limit.

**Maximum Weight: 5.0 kg (11.0 lb)**

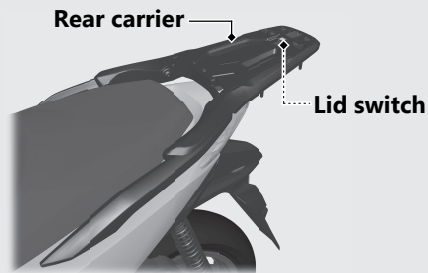

Lid switch is used for optional parts.

Continued 67

## Storage Equipment *(Continued)*


### Glove Box

The glove box will be locked in conjunction with the steering lock.

- ▶ If you do not lock the steering, the glove box is not be locked.


### To lock the steering

#### Upper of the lid

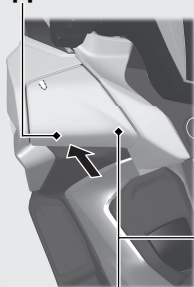

Glove box lid


#### Glove box

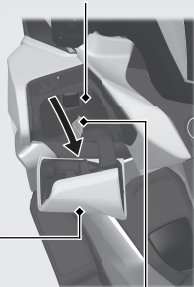

Separator

### Open

Push the upper of the lid, then open the glove box lid when the steering is unlocked.

- ▶ To unlock the steering. 

### Close

Close the glove box lid.

The maximum allowable load in the glove box shall be no more than

**1.5 kg (3.3 lb)**

Make sure that the glove box lid is closed securely.

- ▶ Do not store valuables or fragile articles.
- ▶ The separator can be removed.

# Maintenance

Please read “Importance of Maintenance” and “Maintenance Fundamentals” carefully before attempting any maintenance. Refer to “Specifications” for service data.

<b>Importance of Maintenance .....</b>	<b>P. 70</b>
<b>Maintenance Schedule .....</b>	<b>P. 71</b>
<b>Maintenance Fundamentals .....</b>	<b>P. 74</b>
<b>Tool .....</b>	<b>P. 85</b>
<b>Removing &amp; Installing Body Components..</b>	<b>P. 86</b>
Battery .....	P. 86
Battery Lid .....	P. 87
<b>Engine Oil .....</b>	<b>P. 88</b>
<b>Coolant .....</b>	<b>P. 92</b>
<b>Brakes .....</b>	<b>P. 95</b>
<b>Side Stand .....</b>	<b>P. 97</b>
<b>Throttle .....</b>	<b>P. 98</b>
<b>Crankcase Breather .....</b>	<b>P. 99</b>
<b>Other Adjustments .....</b>	<b>P. 100</b>

Adjusting the Headlight Aim .....	P. 100
Adjusting the Rear Suspension .....	P. 101
Adjusting the Windscreen Height .....	P. 102
<b>Other Replacement .....</b>	<b>P. 103</b>
Replacing the Honda SMART Key Battery ..	P. 103

## Importance of Maintenance

### Importance of Maintenance

Keeping your scooter well-maintained is absolutely essential to your safety and to protect your investment, obtain maximum performance, avoid breakdowns, and reduce air pollution. Maintenance is the owner's responsibility. Be sure to inspect your scooter before each ride, and perform the periodic checks specified in the Maintenance Schedule.

➤ P. 71

### **⚠WARNING**

Improperly maintaining your scooter or failing to correct a problem before you ride can cause a crash in which you can be seriously hurt or killed.

Always follow the inspection and maintenance recommendations and schedules in this owner's manual.

### Maintenance Safety

Always read the maintenance instructions before you begin each task, and make sure that you have the tools, parts, and skills required.

We cannot warn you of every conceivable hazard that can arise in performing maintenance. Only you can decide whether or not you should perform a given task.

Follow these guidelines when performing maintenance.

- Stop the engine and turn the ignition switch to the **○** (Off) position.
- Place your scooter on a firm, level surface using the side stand, centre stand or a maintenance stand to provide support.
- Allow the engine, muffler, brakes, and other high-temperature parts to cool before servicing as you can get burned.
- Run the engine only when instructed, and do so in a well-ventilated area.

## Maintenance Schedule









The maintenance schedule specifies the maintenance requirements necessary to ensure safe, dependable performance, and proper emission control.

Maintenance work should be performed in accordance with Honda's standards and specifications by properly trained and equipped technicians. Your dealer meets all of these requirements. Keep an accurate record of maintenance to help ensure that your scooter is properly maintained. Make sure that whomever performs the maintenance completes this record.


All scheduled maintenance is considered a normal owner operating cost and will be charged to you by your dealer. Retain all receipts. If you sell the scooter, these receipts should be transferred with the scooter to the new owner.

Honda recommends that your dealer should road test your scooter after each periodic maintenance is carried out.

## Maintenance Schedule

Items	Pre-ride Check P. 74	Frequency *1								Annual Check	Regular Replace	Refer to page
		× 1,000 km	1	6	12	18	24	30	36			
		× 1,000 mi	0.6	4	8	12	16	20	24			
Fuel Line				I	I	I	I	I	I	I		—
Fuel Level		I										—
Throttle Operation		I		I	I	I	I	I	I	I		98
Air Cleaner *2						R			R			84
Crankcase Breather *3				C	C	C	C	C	C			99
Spark Plug				Every 24,000 km (16,000 mi): I Every 48,000 km (32,000 mi): R								—
Valve Clearance				I	I	I	I	I	I			—
Engine Oil		I	R	R	R	R	R	R	R	R		89
Engine Oil Strainer Screen				C		C		C		C		89
Engine Idle Speed				I	I	I	I	I	I	I		—
Radiator Coolant *4		I			I		I		I	I	3 Years	92
Cooling System					I		I		I	I		—
Drive Belt					I		R		I			—

### Maintenance Level

 : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled.

Procedures are provided in an official Honda Shop Manual.

 : Technical. In the interest of safety, have your scooter serviced by your dealer.

























































































### Maintenance Legend

**I** : Inspect (clean, adjust, lubricate, or replace, if necessary)

**R** : Replace

**C** : Clean

## Maintenance Schedule

Items		Pre-ride Check P. 74	Frequency *1								Annual Check	Regular Replace	Refer to page
			× 1,000 km	1	6	12	18	24	30	36			
			× 1,000 mi	0.6	4	8	12	16	20	24			
Final Drive Oil *4												2 Years	—
Battery													76
Brake Fluid *4												2 Years	95
Brake Pads Wear													96
Brake System													74
Headlight Aim													100
Lights/Horn													—
Clutch Shoes Wear													—
Side Stand													97
Suspension													—
Nuts, Bolts, Fasteners													—
Wheels/Tyres													81
Steering Head Bearings													—

## Notes:

\*1 : At higher odometer reading, repeat at the frequency interval established here.

\*2 : Service more frequently when riding in unusually wet or dusty areas.

\*3 : Service more frequently when riding in rain or at full throttle.

\*4 : Replacement requires mechanical skill.



## Maintenance Fundamentals

### Pre-ride Inspection

To ensure safety, it is your responsibility to perform a pre-ride inspection and make sure that any problem you find is corrected. A pre-ride inspection is a must, not only for safety, but because having a breakdown, or even a flat tyre, can be a major inconvenience.

Check the following items before you get on your scooter:

- Fuel level - Fill fuel tank when necessary.  
➤ P. 62
- Throttle - Check for smooth opening and full closing in all steering positions. ➤ P. 98
- Engine oil level - Add engine oil if necessary.  
Check for leaks. ➤ P. 88
- Coolant level - Add coolant if required.  
Check for leaks. ➤ P. 92


- Brakes - Check operation;  
Front and Rear: check brake fluid level and pads wear. ➤ P. 95, ➤ P. 96
- Lights and horn - Check that lights, indicators and horn function properly.
- Side stand ignition cut-off system - Check for proper function. ➤ P. 97
- Wheels and tyres - Check condition, air pressure and adjust if necessary. ➤ P. 81

## Maintenance Fundamentals

### Replacing Parts

Always use Honda Genuine Parts or their equivalents to ensure reliability and safety. When ordering coloured components, specify the model name, colour, and code mentioned on the colour label.

The colour label is attached to the luggage box under the seat. ➡ P. 64

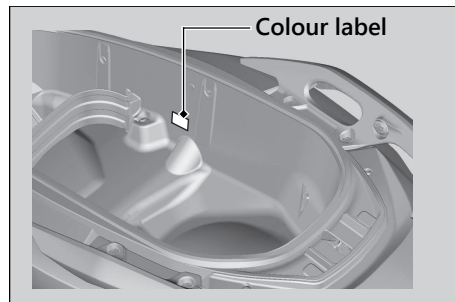

### **⚠WARNING**

Installing non-Honda parts may make your scooter unsafe and cause a crash in which you can be seriously hurt or killed.

Always use Honda Genuine Parts or equivalents that have been designed and approved for your scooter.

## Maintenance Fundamentals

### Battery

Your scooter has a maintenance-free type battery. You do not have to check the battery electrolyte level or add distilled water. Clean the battery terminals if they become dirty or corroded.

Do not remove the battery cap seals. There is no need to remove the cap when charging.

#### NOTICE

Your battery is a maintenance-free type and can be permanently damaged if the cap strip is removed.



This symbol on the battery means that this product must not be treated as household waste.

#### NOTICE

An improperly disposed of battery can be harmful to the environment and human health. Always confirm local regulations for proper battery disposal instruction.

### What to do in an emergency

If any of the following occur, immediately see your doctor.

- Electrolyte splashes into your eyes:
  - ▶ Wash your eyes repeatedly with cool water for at least 15 minutes. Using water under pressure can damage your eyes.
- Electrolyte splashes onto your skin:
  - ▶ Remove affected clothing and wash your skin thoroughly using water.
- Electrolyte splashes into your mouth:
  - ▶ Rinse mouth thoroughly with water, and do not swallow.

## Maintenance Fundamentals

### **⚠WARNING**


The battery gives off explosive hydrogen gas during normal operation.

A spark or flame can cause the battery to explode with enough force to kill or seriously hurt you.

Wear protective clothing and a face shield, or have a skilled mechanic do the battery servicing.

### **■ Cleaning the Battery Terminals**

1. Remove the battery. ▣ P. 86
2. If the terminals are starting to corrode and are coated with a white substance, wash with warm water and wipe clean.
3. If the terminals are heavily corroded, clean and polish the terminals with a wire brush or sandpaper. Wear safety glasses.

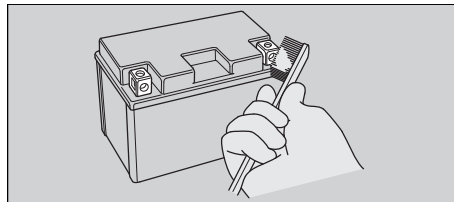

## Maintenance Fundamentals

4. After cleaning, reinstall the battery.

The battery has a limited life span. Consult your dealer about when you should replace the battery. Always replace the battery with another maintenance-free battery of the same type.


### NOTICE

Installing non-Honda electrical accessories can overload the electrical system, discharging the battery and possibly damaging the system.


### Fuses

Fuses protect the electrical circuits on your scooter. If something electrical on your scooter stops working, check for and replace any blown fuses. ■ P. 125

## Inspecting and Replacing Fuses

Turn the ignition switch to the  (Off) position to remove and inspect fuses. If a fuse is blown, replace with a fuse of the same rating. For fuse ratings, see "Specifications." ■ P. 144

### Blown fuse

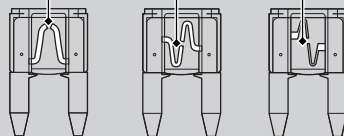

### NOTICE

Replacing a fuse with one that has a higher rating greatly increases the chance of damage to the electrical system.

If a fuse fails repeatedly, you likely have an electrical fault. Have your scooter inspected by your dealer.

## Maintenance Fundamentals

### Engine Oil

Engine oil consumption varies and oil quality deteriorates according to riding conditions and time elapsed.

Check the engine oil level regularly, and add the recommended engine oil if necessary. Dirty oil or old oil should be changed as soon as possible.


### Selecting the Engine Oil

For recommended engine oil, see "Specifications." ■ P. 143


If you use non-Honda engine oil, check the label to make sure that the oil satisfies all of the following standards:

- JASO T 903 standard<sup>\*1</sup>: MB
- SAE standard<sup>\*2</sup>: 10W-30
- API classification<sup>\*3</sup>: SG or higher

- <sup>\*1</sup>. The JASO T 903 standard is an index for engine oils for 4-stroke motorcycle engines. There are two classes: MA and MB. For example, the following label shows the MB classification.

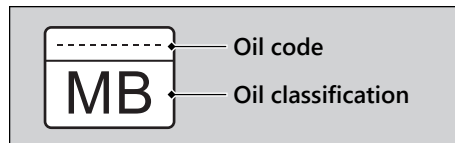

- <sup>\*2</sup>. The SAE standard grades oils by their viscosity.
- <sup>\*3</sup>. The API classification specifies the quality and performance rating of engine oils. Use SG or higher oils, excluding oils marked as "Energy Conserving" or "Resource Conserving" on the circular API service symbol.

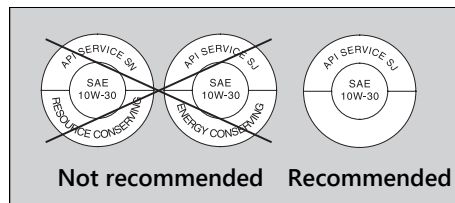

## Maintenance Fundamentals

### Brake Fluid

Do not add or replace brake fluid, except in an emergency. Use only fresh brake fluid from a sealed container. If you do add fluid, have the brake system serviced by your dealer as soon as possible.

#### NOTICE

Brake fluid can damage plastic and painted surfaces.  
Wipe up spills immediately and wash thoroughly.

#### Recommended brake fluid:

Honda DOT 4 Brake Fluid or equivalent

### Recommended Coolant

Pro Honda HP Coolant is a pre-mixed solution of antifreeze and distilled water.

#### Concentration:

50% antifreeze and 50% distilled water

A concentration of antifreeze below 40% will not provide proper corrosion and cold temperature protection.  
A concentration of up to 60% will provide better protection in colder climates.

#### NOTICE

Using coolant not specified for aluminium engines or tap/mineral water can cause corrosion.

## Maintenance Fundamentals

### Crankcase Breather

Service more frequently when riding in rain, at full throttle, or after the scooter is washed or overturned. Service if the deposit level can be seen in the transparent section of the drain tube.


If the drain tube overflows, the air filter may become contaminated with engine oil causing poor engine performance. ■ P. 99

### Tyres (Inspecting/Replacing)

#### ■ Checking the Air Pressure

Visually inspect your tyres and use an air pressure gauge to measure the air pressure at least once a month or any time you think the tyres look low. Always check air pressure when your tyres are cold.


#### ■ Inspecting for Damage

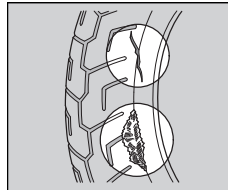

Inspect the tyres for cuts, slits, or cracks that exposes fabric or cords, or nails or other foreign objects embedded in the side of the tyre or the tread.

Also inspect for any unusual bumps or bulges in the side walls of the tyres.

#### ■ Inspecting for Abnormal Wear

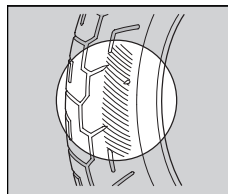

Inspect the tyres for signs of abnormal wear on the contact surface.




## Maintenance Fundamentals

### Inspecting Tread Depth

Inspect the tread wear indicators. If they become visible, replace the tyres immediately.

Maintenance

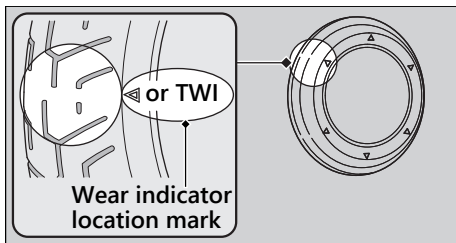

### **⚠ WARNING**

Riding on tyres that are excessively worn or improperly inflated can cause a crash in which you can be seriously hurt or killed.

Follow all instructions in this owner's manual regarding tyre inflation and maintenance.

## Maintenance Fundamentals

Have your tyres replaced by your dealer.  
For recommended tyres and air pressure, see  
"Specifications." ■ P. 143  
Follow these guidelines whenever you replace  
tyres.

- Use the recommended tyres or equivalents  
of the same size, construction, speed rating,  
and load range.
- **Front wheel only** Have the wheel balanced  
with Honda Genuine balance weights or  
equivalent after the tyre is installed.
- Do not install a tube inside a tubeless tyre  
on this scooter. Excessive heat build-up can  
cause the tube to burst.
- Use only tubeless tyres on this scooter.  
The rims are designed for tubeless tyres,  
and during hard acceleration or braking, a  
tube-type tyre could slip on the rim and  
cause the tyre to rapidly deflate.

**⚠ WARNING**

Installing improper tyres on your  
scooter can adversely affect handling  
and stability, and can cause a crash in  
which you can be seriously hurt or  
killed.

Always use the size and type of tyres  
recommended in this owner's manual.


## Maintenance Fundamentals

### Air Cleaner

This scooter is equipped with a viscous type air cleaner element.

Air blow cleaning or any other cleaning can degrade the viscous element performance and cause the intake of dust.

Do not perform the maintenance. Should be serviced by your dealer.

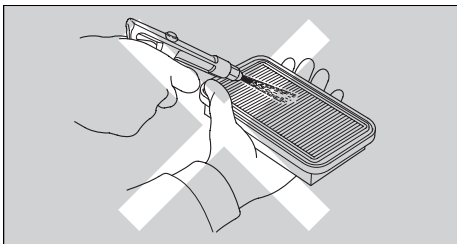

## Tool

The tool kit is stored in the compartment in the luggage box. ■ P. 67


You can perform some roadside repairs, minor adjustments and parts replacement with the provided tools.

- Standard/Phillips screwdriver
- Screwdriver handle
- Pin spanner
- Extension bar
- Helmet set wire
- EM mode coupler

## Removing & Installing Body Components

### Battery

Maintenance

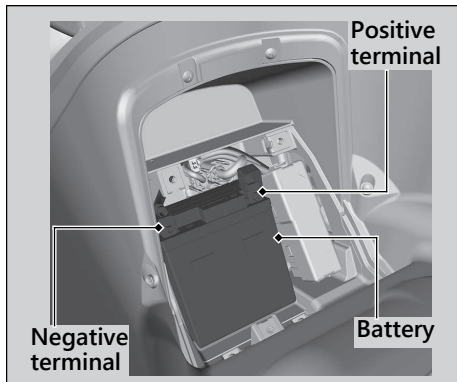

### Removal

Make sure the ignition switch is in the ○ (Off) position.

1. Remove the battery lid. ➡ P. 87
2. Disconnect the negative ⊖ terminal from the battery.
3. Disconnect the positive ⊕ terminal from the battery.
4. Remove the battery taking care not to drop the terminal nuts.


### Installation

Install the parts in the reverse order of removal. Always connect the positive ⊕ terminal first. Make sure that bolts and nuts are tight.

Make sure the clock information is correct after the battery is reconnected. ➡ P. 34  
For proper handling of the battery, see "Maintenance Fundamentals." ➡ P. 76  
"Battery Goes Dead." ➡ P. 123

Removing & Installing Body Components ► Battery Lid

## Battery Lid

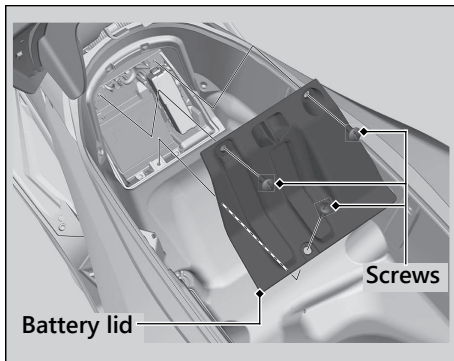

### Removal

1. Open the seat. ▣ P. 64
2. Remove the screws.
3. Remove the battery lid.

### Installation

Install the parts in the reverse order of removal.


## Engine Oil

### Checking the Engine Oil

Check the engine oil with the Idling Stop switch at IDLING.

1. If the engine is cold, idle the engine for 3 to 5 minutes.
2. Turn the ignition switch to the **○** (Off) position and wait for 2 to 3 minutes.
3. Place your scooter on its centre stand on a firm, level surface.
4. Remove the oil fill cap/dipstick and wipe it clean.
5. Insert the oil fill cap/dipstick until it seats, but don't screw it in.
6. Check that the oil level is between the upper level and lower level marks on the oil fill cap/dipstick.
7. Securely install the oil fill cap/dipstick.

Oil fill cap/dipstick

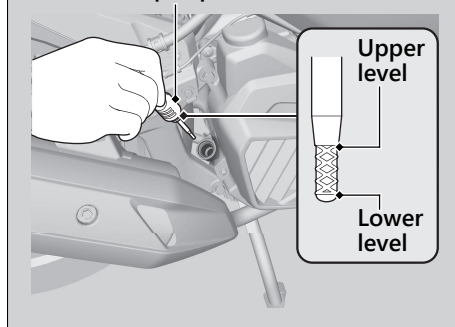

## Adding Engine Oil

If the engine oil is below or near the lower level mark, add the recommended engine oil.

► P. 79, ► P. 143

1. Remove the oil fill cap/dipstick. Add the recommended oil until it reaches the upper level mark.
  - Place your scooter on its centre stand on a firm, level surface when checking the oil level.
  - Do not overfill above the upper level mark.
  - Make sure no foreign objects enter the oil filler opening.
  - Wipe up any spills immediately.
2. Securely reinstall the oil fill cap/dipstick.

### NOTICE

Overfilling with oil or operating with insufficient oil can cause damage to your engine. Do not mix different brands and grades of oil.

For the recommended oil and oil selection guidelines, see "Maintenance Fundamentals."

► P. 79

## Changing Engine Oil, Cleaning Strainer Screen

Changing the oil and cleaning the strainer screen requires special tools. We recommend that you have your scooter serviced by your dealer.

Change the engine oil with the Idling Stop switch at IDLING.



1. If the engine is cold, idle the engine for 3 to 5 minutes.
2. Turn the ignition switch to the **○** (Off) position and wait for 2 to 3 minutes.
3. Place your scooter on its centre stand on a firm, level surface.



## Engine Oil ► Changing Engine Oil, Cleaning Strainer Screen

4. Place a drain pan under the drain bolt and oil plug.
5. Remove the oil fill cap/dipstick, drain bolt and sealing washer to drain the oil.
6. Remove the oil plug, O-ring, spring and oil strainer screen and let the remaining oil drain out.
  - Discard the oil at an approved recycling centre.
7. Clean the oil strainer screen.
8. Check that the oil strainer screen and sealing rubber are in good condition.
9. Replace the O-ring and apply a thin coat of engine oil to the new O-ring before installing it.
10. Install the oil strainer screen, spring and oil plug and tighten.

**Torque:** 20 N·m (2.0 kgf·m, 15 lbf·ft)

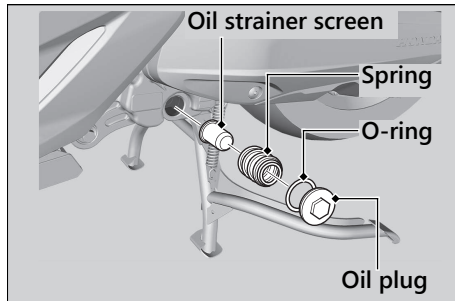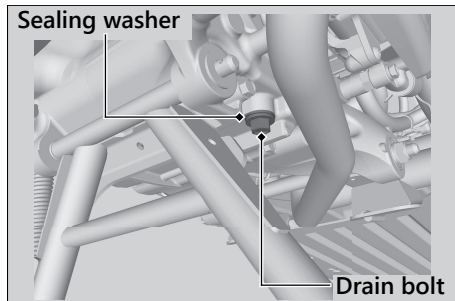

## Engine Oil ► Changing Engine Oil, Cleaning Strainer Screen

11. Install a new sealing washer onto the drain bolt. Tighten the drain bolt.

**Torque:** 24 N·m (2.4 kgf·m, 18 lbf·ft)

12. Fill the crankcase with the recommended oil (► P. 79, ► P. 143) and install the oil fill cap/dipstick.

### Required oil

**When changing oil & cleaning the strainer screen:**

0.8 L (0.8 US qt, 0.7 Imp qt)

**When changing oil only:**

0.8 L (0.8 US qt, 0.7 Imp qt)

13. Check the oil level. ► P. 88
14. Check that there are no oil leaks.

After changing the engine oil, reset the oil change indicator. ► P. 32


## Coolant

### Checking the Coolant

Check the coolant level in the reserve tank while the engine is cold.

1. Place your scooter on a firm, level surface.
2. Hold your scooter in an upright position.
3. Check that the coolant level is between the UPPER level and LOWER level marks on the reserve tank.

If the coolant level is dropping noticeably or the reserve tank is empty, you likely have a serious leak. Have your scooter inspected by your dealer.

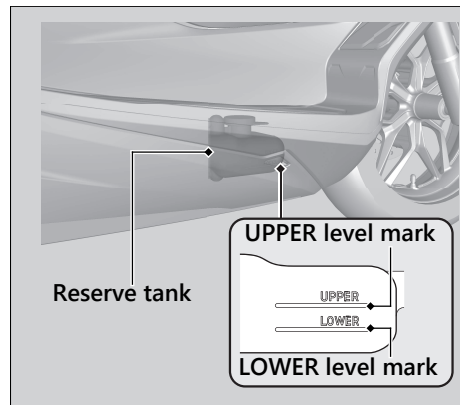


## Adding Coolant

If the coolant level is below the LOWER level mark, add the recommended coolant (► P. 80) until the level reaches the UPPER level mark.

Add fluid only from the reserve tank cap and do not remove the radiator cap.

1. Pull the floor mat off.
2. Remove the reserve tank lid by using a flat head screwdriver covered with a protective cloth.
3. Remove the reserve tank cap and add fluid while monitoring the coolant level.
  - Do not overfill above the UPPER level mark.
  - Make sure no foreign objects enter the reserve tank opening.
4. Securely reinstall the reserve tank cap.
5. Install the reserve tank lid.
6. Install the floor mat.

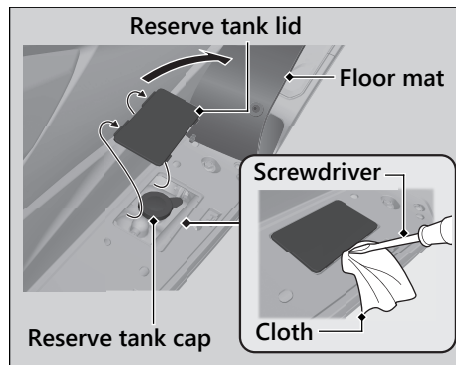

### ⚠ WARNING

Removing the radiator cap while the engine is hot can cause the coolant to spray out, potentially scalding you.

Always let the engine and radiator cool down before removing the radiator cap.

Coolant ► Changing Coolant

## Changing Coolant

---

Have your dealer change the coolant unless you have the proper tools and are mechanically qualified.

Maintenance


## Brakes

### Checking Brake Fluid

1. Place your scooter in an upright position on a firm, level surface.
2. Check that the brake fluid reservoir is horizontal and that the fluid level is above the LOWER level mark.

If the brake fluid level in either reservoir is below the LOWER level mark or both the brake levers freeplay becomes excessive, inspect the brake pads for wear.

If the brake pads are not worn, you most likely have a leak. Have your scooter inspected by your dealer.

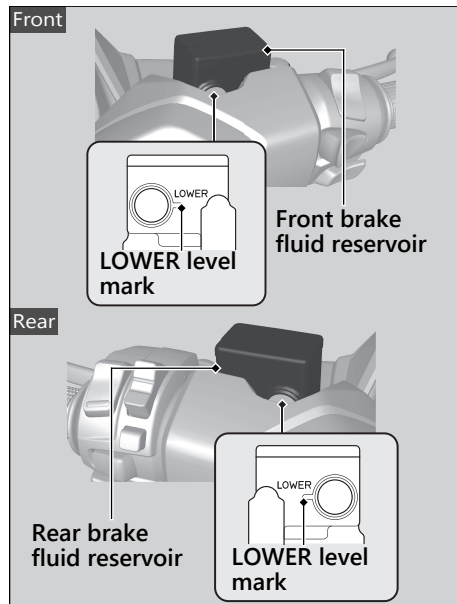

## Brakes ► Inspecting the Brake Pads

## Inspecting the Brake Pads


Check the condition of the brake pad wear indicators.

The pads need to be replaced if a brake pad is worn to the indicator.

1. **Front** Inspect the brake pads from below the brake caliper.
2. **Rear** Inspect the brake pads from the rear of the scooter.


If necessary have the pads replaced by your dealer.

Always replace both left and right brake pads at the same time.

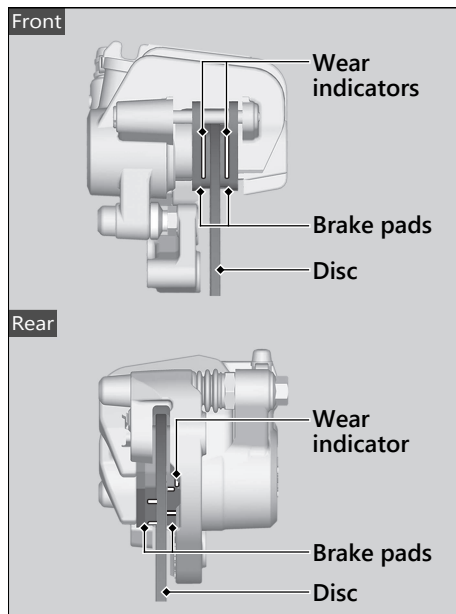

## Side Stand

### Checking the Side Stand

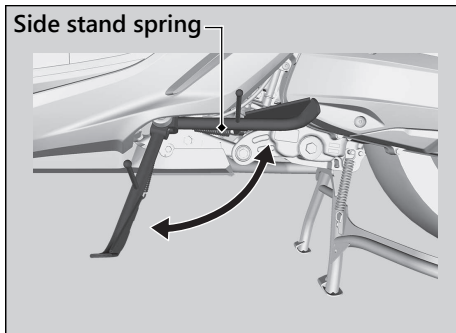

1. Place your scooter on its centre stand on a firm, level surface.
2. Check that the side stand operates smoothly. If the side stand is stiff or squeaky, clean the pivot area and lubricate the pivot bolt with clean grease.

3. Check the spring for damage or loss of tension.
4. Sit on the scooter and raise the side stand.
5. Start the engine.
6. Lower the side stand all the way. The engine should stop as you lower the side stand. If the engine doesn't stop, have your scooter inspected by your dealer.



## Throttle


### Checking the Throttle

With the engine off, check that the throttle rotates smoothly from fully closed to fully open in all steering positions and throttle freeplay is correct. If the throttle does not move smoothly, close automatically, or if the cable is damaged, have the scooter inspected by your dealer.

Maintenance

#### Freeplay at the throttle grip flange:


2 - 6 mm (0.1 - 0.2 in)

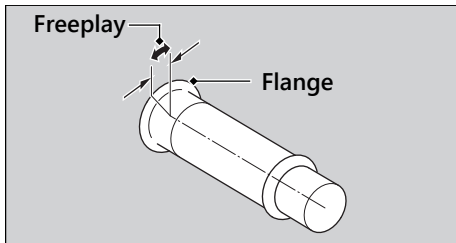

## Crankcase Breather

### Cleaning the Crankcase Breather

1. Place a suitable container under the crankcase breather tube.
2. Remove the crankcase breather tube and drain deposits.
3. Reinstall the crankcase breather tube.

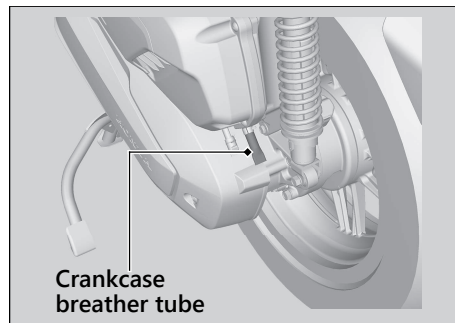


## Other Adjustments

### Adjusting the Headlight Aim

You can adjust vertical aim of the headlight for proper alignment. Turn the pinion in or out as necessary using a Phillips screwdriver provided in the tool kit (P. 85). Obey local laws and regulations.

Maintenance

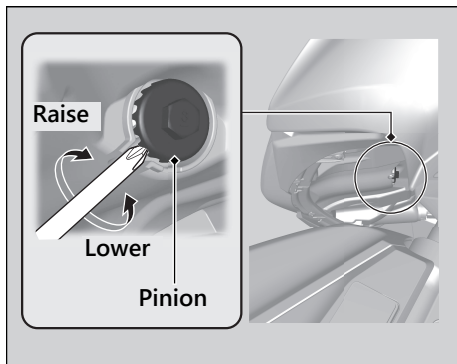

## Other Adjustments ► Adjusting the Rear Suspension

## Adjusting the Rear Suspension

### I Spring Preload


You can adjust the spring preload by the adjuster to suit the load or the road surface. Use the pin spanner and extension bar provided in the tool kit (► P. 85) to turn the adjuster. Position 1 is for a decrease spring preload (soft), or turn the position 3 to 5 increase spring preload (hard). The standard position is 2.

**NOTICE**

Attempting to adjust directly from 1 to 5 or 5 to 1 may damage the shock absorber.

**NOTICE**

Do not turn the adjuster beyond its limits. Adjust both left and right shock absorbers to the same spring preload.

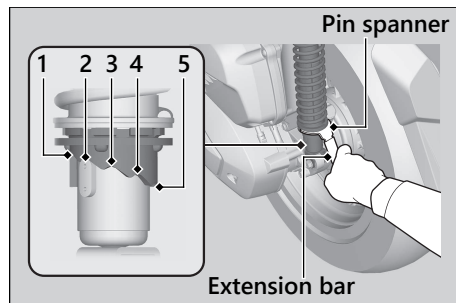

## Other Adjustments ► Adjusting the Windscreen Height

### Adjusting the Windscreen Height


You can adjust your windscreen height higher or lower according to your preference.

1. Turn the ignition switch to the **I** (On) position.
2. Push the ▲ (up) side of the windscreen adjusting switch to raise the windscreen. Push the ▼ (down) side of the windscreen adjusting switch to lower the windscreen.

The windscreen will be raised or lowered while the adjusting switch is being pressed.

Check the windscreen adjustment for smooth operation and check the sliding area for looseness.

If the windscreen is significantly loose or you notice that the windscreen is loose while riding, see your dealer.

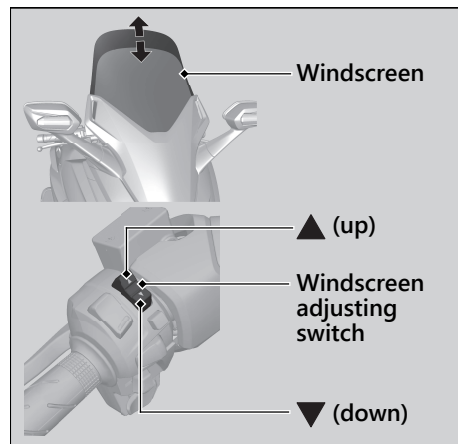

## Other Replacement

### Replacing the Honda SMART Key Battery


If the Honda SMART Key indicator flashes 5 times when the ignition switch is turned I (On) position, or the operating range becomes unstable, replace the battery as soon as possible.

We recommend to see your dealer for this service.

**Battery type:** CR2032

1. Remove the upper case by inserting a coin or a flat head screwdriver covered with a protective cloth into the slit.
  - ▶ Wrap a coin or a screwdriver with a protective cloth to prevent scratching the Honda SMART Key.
  - ▶ Do not touch the circuit or terminal. This may cause problems.
  - ▶ Be careful to avoid scratching the waterproof covering or allowing dust to enter.
  - ▶ Do not forcibly dismantle the Honda SMART Key body.

## Other Replacement ► Replacing the Honda SMART Key Battery

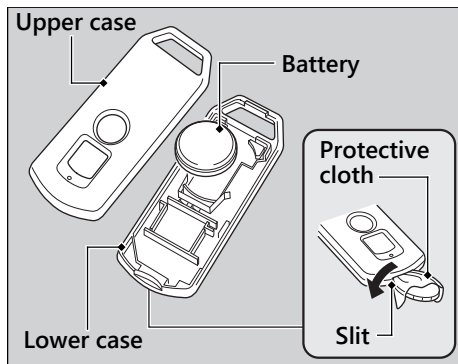

2. Replace the old battery with a new battery with the negative  $\ominus$  side facing up.
3. Snap the two halves of the case back together.
  - Make sure that upper and lower cases are set in the right position.

## **⚠ WARNING**

**Chemical Burn Hazard: do not swallow battery.**

If swallowed, the battery can cause severe internal burns and even death.

- Keep battery away from children and battery compartment securely closed.
- If the battery compartment does not close securely, stop using the product and keep it away from children.
- Immediately seek medical attention if a child may have swallowed battery.

# Troubleshooting

<b>Engine Will Not Start.....</b>	P. 106
<b>Overheating (High coolant temperature indicator is on) .....</b>	P. 107
<b>Warning Indicators On or Flashing.....</b>	P. 108
PGM-FI (Programmed Fuel Injection)	
Malfunction Indicator Lamp (MIL).....	P. 108
ABS (Anti-lock Brake System) Indicator .....	P. 109
Honda SMART Key Indicator.....	P. 110
<b>Other Warning Indications .....</b>	P. 111
Fuel Gauge Failure Indication.....	P. 111
<b>When the Idling Stop System Does Not Operate Properly.....</b>	P. 112
Idling Stop Indicator Does Not Come On ..	P. 112
Engine is Not Stopped by the Idling Stop System	
While the Idling Stop Indicator is On .....	P. 113

Engine Does Not Start Even If the Throttle is	
Opened .....	P. 114
<b>When the Honda SMART Key System Does Not Operate Properly .....</b>	P. 115
<b>Unlock the Seat in an Emergency .....</b>	P. 117
<b>Unlock the Ignition Switch in an</b>	
<b>Emergency .....</b>	P. 119
<b>Tyre Puncture .....</b>	P. 122
<b>Electrical Trouble.....</b>	P. 123
Battery Goes Dead.....	P. 123
Burned-out Light Bulb .....	P. 123
Blown Fuse.....	P. 125
<b>Unstable Engine Operation Occurs</b>	
<b>Intermittently .....</b>	P. 126



## Engine Will Not Start

### Starter Motor Operates But Engine Does Not Start

Check the following items:

- Check the correct engine starting sequence. ➡ P. 56
- Check that there is petrol in the fuel tank.
- Check if the PGM-FI malfunction indicator lamp (MIL) is on.
  - ▶ If the indicator lamp is on, contact your dealer as soon as possible.

Troubleshooting

### Starter Motor Does Not Operate

Check the following items:

- Check the correct engine starting sequence. ➡ P. 56
- Check for a blown fuse. ➡ P. 125
- Check for a loose battery connection (➡ P. 86) or battery terminal corrosion (➡ P. 76).
- Check the condition of the battery.
  - ➡ P. 123

If the problem continues, have your scooter inspected by your dealer.

## Overheating (High coolant temperature indicator is on)


The engine is overheating when the following occurs:

- High coolant temperature indicator comes on.  
Also the segment H flashes in the coolant temperature gauge.
- Acceleration becomes sluggish.  
If this occurs, pull safely to the side of the road and perform the following procedure.

Extended fast idling may cause the high coolant temperature indicator to come on.

### NOTICE

Continuing to ride with an overheated engine can cause serious damage to the engine.

1. Stop the engine using the ignition switch.
2. Allow the engine to cool with the ignition switch in the  (Off) position.
3. After the engine has cooled, inspect the radiator hose and check if there is a leak.  
➡ P. 92  
**If there is a leak:**  
Do not start the engine. Transport your scooter to your dealer.
4. Check the coolant level in the reserve tank. ➡ P. 92  
▶ Add coolant as necessary.
5. If 1-4 check normal, you may continue riding, but closely monitor the temperature gauge.

## Warning Indicators On or Flashing

### **PGM-FI (Programmed Fuel Injection) Malfunction Indicator Lamp (MIL)**

If the indicator comes on while riding, you may have a serious problem with the PGM-FI system. Reduce speed and have your scooter inspected by your dealer as soon as possible.

Troubleshooting

## Warning Indicators On or Flashing ► ABS (Anti-lock Brake System) Indicator

## ABS (Anti-lock Brake System) Indicator

If the indicator operates in one of the following ways, you may have a serious problem with the ABS. Reduce your speed and have your scooter inspected by your dealer as soon as possible.

- Indicator comes on or starts flashing while riding.
- Indicator does not come on when the ignition switch is in the **I** (On) position.
- Indicator does not go off at speeds above 5 km/h (3 mph).

If the ABS indicator stays on, your brakes will continue to work as a conventional system, but without the anti-locking function.

The ABS indicator may flash if you turn the rear wheel while the rear wheel is lifted off the ground. In this case, turn the ignition switch to the **O** (Off) position, and then to the **I** (On) position again. The ABS indicator will go off after your speed reaches 30 km/h (19 mph).

## Warning Indicators On or Flashing ► Honda SMART Key Indicator

## Honda SMART Key Indicator

### When the Honda SMART Key indicator flashes 5 times

**Replacing the Honda SMART Key Battery** ■ P. 103

### When the Honda SMART Key indicator is flashing while the ignition switch is in the (On) position

The Honda SMART Key indicator flashes when communication between your scooter and Honda SMART Key stops after turning the ignition switch to the (On) position. It is probably caused by the following:

- Strong radio waves or noise are affecting the system
- You lose the Honda SMART Key while riding

However, this does not affect the operation of your scooter until the ignition switch is locked.

If you turn the ignition switch to the SEAT FUEL, (Off) or (Lock) position while the Honda SMART Key indicator is flashing, the ignition switch ring, turn signal lights, and Honda SMART Key indicator will come on for about 20 seconds, automatically go off, and then the ignition switch is locked.

Also, to stop this flashing, press and hold the ignition switch for more than 2 seconds. After the flashing stops, the ignition switch is locked.



If you do not have the Honda SMART Key, the ignition switch can be unlocked in another way. ■ P. 119

## Other Warning Indications

### Fuel Gauge Failure Indication

If the fuel system has an error, the fuel gauge indicators will be displayed as shown in the illustration.

If this occurs, see your dealer as soon as possible.

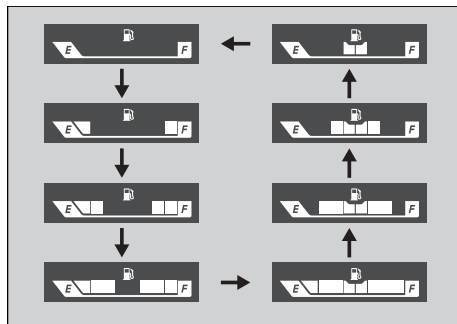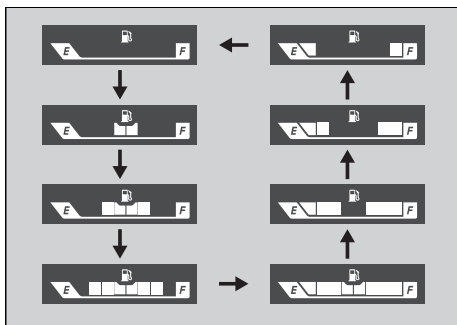

Troubleshooting

## When the Idling Stop System Does Not Operate Properly

### Idling Stop Indicator Does Not Come On

When the Idling Stop indicator does not come on, perform the followings.

#### If the Idling Stop switch is at IDLING:

Press the Idling Stop switch to IDLING STOP.

#### If the engine is cold:

Warm up the engine.

The Idling Stop system does not operate when the engine is cold.

#### If you did not ride the scooter after engine starts:

Ride the scooter at speeds of over 10 km/h (6 mph). The Idling Stop system does not operate until you ride once.

#### If PGM-FI malfunction indicator lamp (MIL) lights:

When the PGM-FI malfunction indicator lamp (MIL) lights, the Idling Stop system does not operate for protection of the engine. See your dealer.

#### If the battery voltage is low:

Ride the scooter awhile, then stop the engine and then restart the engine referring to the starting procedure (P. 56) for standard engine starting. The Idling Stop system may not operate if the battery voltage is low. If this occurs frequently, contact your dealer.

When the Idling Stop System Does Not Operate Properly ► Engine is Not Stopped by the Idling Stop System While the Idling Stop Indicator is On

## **Engine is Not Stopped by the Idling Stop System While the Idling Stop Indicator is On**

When the engine is not stopped by the Idling Stop system while the Idling Stop indicator is on, perform the followings.

### **If the scooter does not stop completely:**

Stop the scooter completely. The Idling Stop system operates only if the speed is at 0 km/h (0 mph).

### **If the throttle is not closed completely:**

Close the throttle completely.



When the Idling Stop System Does Not Operate Properly ► Engine Does Not Start Even If the Throttle is Opened

## Engine Does Not Start Even If the Throttle is Opened

Engine does not start even if the throttle is opened, perform the followings.

### If the side stand is down:

While the engine is stopped by the Idling Stop system, if you operate the side stand, the flashing Idling Stop indicator turns off or stops flashing and stays on, and the Idling Stop system is cancelled. Restart the engine referring to the starting procedure (► P. 56) for standard engine starting.

### If the Idling Stop switch is at IDLING:

While the engine is stopping by the Idling Stop system, if you press the Idling Stop switch to IDLING, the Idling Stop system will be cancelled. Restart the engine referring to the starting procedure (► P. 56) for standard engine starting.

If the Idling Stop indicator flashes (the Idling Stop switch is at IDLING STOP position), but engine does not start even if the throttle is opened, perform the followings.

### Low (or dead) battery or battery lead is loose:

Check the battery and battery terminals. If the battery is weak, contact your dealer.

## When the Honda SMART Key System Does Not Operate Properly

When the Honda SMART Key system does not work properly, perform the following.

- Check that the Honda SMART Key system is activated.

Lightly push the ON/OFF button on the Honda SMART Key.

If the LED of the Honda SMART Key is red, switch the Honda SMART Key system to activation. ■ P. 44

If the LED of the Honda SMART Key does not respond, replace the battery of the Honda SMART Key. ■ P. 103

- Check that there is no communication failure in the Honda SMART Key system. The Honda SMART Key system uses low-intensity radio waves. The Honda SMART Key system may not work properly in the following environments:

- ▶ When there are facilities nearby that generate strong radio waves or noise such as TV towers, power stations, radio stations, or airports.
- ▶ When you carry the Honda SMART Key with a laptop or wireless communication device such as a radio or mobile phone.
- ▶ When the Honda SMART Key comes into contact with or is covered by metal objects.

## When the Honda SMART Key System Does Not Operate Properly

### Troubleshooting

- Check that a registered Honda SMART Key is used.  
Use a registered Honda SMART Key.  
The Honda SMART Key system cannot be activated without a registered Honda SMART Key.

- Make sure that you do not use a broken Honda SMART Key.  
If you use a broken Honda SMART Key, the Honda SMART Key system cannot be activated. Bring the emergency key and ID tag to your dealer.

- Check the battery condition and battery lead in your scooter.  
Check the battery and battery terminals. If the battery is weak, contact your dealer.


If the Honda SMART Key system cannot be activated due to other causes, contact your dealer.

## Unlock the Seat in an Emergency

The seat lock can be unlocked by using the emergency key.

### **I Open**

1. Pull the neck guard cover upward to release the prongs.

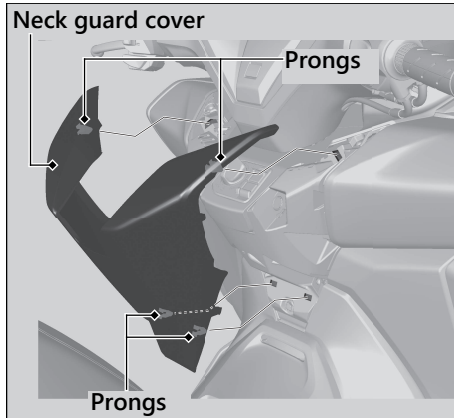


## Unlock the Seat in an Emergency

2. Align the projection of the emergency key with the slot of the emergency seat opener, and turn the emergency key counterclockwise.
3. Open the seat and turn the emergency key clockwise

### Close



1. Close and push down on the rear of the seat until it locks. Make sure that the seat is locked securely by pulling it up lightly. If the seat is not locked, turn the emergency key clockwise to lock the seat catch.
2. Install the neck guard cover in the reverse order of removal.

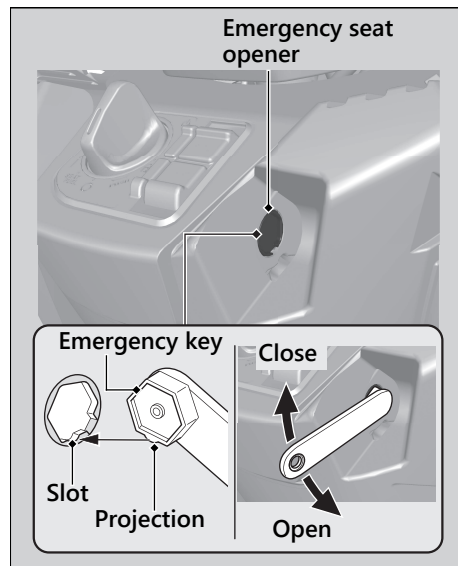

## Unlock the Ignition Switch in an Emergency

### Set up to ID number input mode

1. Use the emergency key to open the seat.  
▶ P. 117
2. Remove the battery lid. ▶ P. 87
3. Pull out the EM mode connector.
4. Remove the blue dummy coupler by releasing the tab of the EM mode connector while lifting the hook of the blue dummy coupler.
5. Check the ID number on the ID tag.
6. Connect the EM mode coupler provided in the tool kit to the EM mode connector.

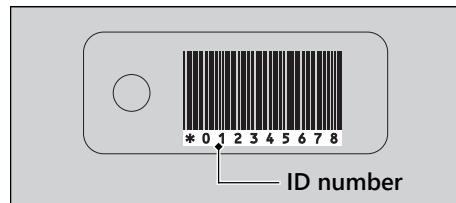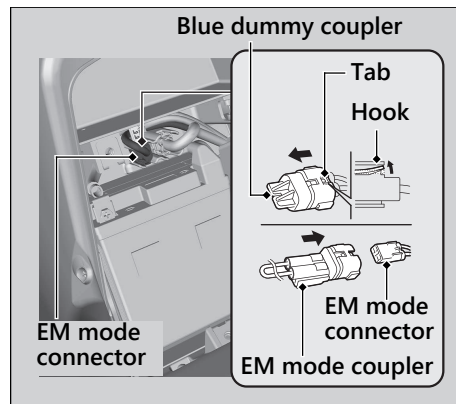

Troubleshooting

## Unlock the Ignition Switch in an Emergency

### ID number input

You can input your ID number by pressing the ignition switch when the ignition switch is ○ (Off), 🔒 (Lock) and SEAT FUEL position. Input the ID number on the ID tag in order from the left in turn by pressing the ignition switch.


The ID number is authenticated according to the number of times the ignition switch is pushed.

Push the ignition switch the desired number of times within 5 seconds when the ignition switch ring comes on. After 5 seconds, the ignition switch ring goes off and comes on again. This means that the inputted number is fixed, and you can input the next number.

- ▶ If the ignition switch ring does not come on in blue, the battery may be low. Contact your dealer.

### Example:

- To input "0", wait for 5 seconds without pushing the ignition switch when the ignition switch ring comes on.
- To input "1", push the ignition switch once within 5 seconds when the ignition switch ring comes on.

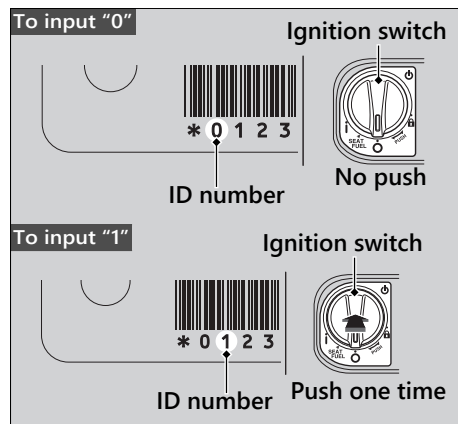

## Unlock the Ignition Switch in an Emergency

### ID number input success

After the last ID number is inputted, through, the ignition switch ring and Honda SMART Key Indicator will flash every 2 seconds until the EM mode coupler is removed.

Be sure to remove the EM mode coupler and return the blue dummy coupler. The ignition switch is then unlocked. Reinstall the parts in reverse order of removal and turn the ignition switch to the **I** (On) position within 6 minutes. You can start the engine.

To lock the ignition switch, turn the ignition switch to the SEAT FUEL, **O** (Off), or **L** (Lock) position, and press and hold the ignition switch for 2 seconds. The ignition switch also locks automatically when the ignition switch has been in the SEAT FUEL, **O** (Off), or **L** (Lock) position for about 6 minutes after the ID number is successfully inputted.

When the ignition switch is locked, the ignition switch ring goes off.

To unlock the ignition switch again, repeat the procedure for unlocking the ignition switch.

### ID number input failure

After the last ID number is inputted, the ignition switch ring and Honda SMART Key Indicator will flash every second until the EM mode coupler is removed, and the ignition switch cannot be unlocked.

Pull out the EM mode coupler and reconnect it to the EM mode connector. Follow the procedure again. ➤ P. 120

### ID number input cancel

Pull out the EM mode coupler from the EM mode connector.

Also, if you make a mistake while inputting the ID number, remove the EM mode coupler from the EM mode connector, connect it to the EM mode connector again, and then re-input the ID number from the beginning.

- Store the removed EM mode coupler in the tool kit at all times.



## Tyre Puncture

Repairing a puncture or removing a wheel requires special tools and technical expertise. We recommend you have this type of service performed by your dealer.

After an emergency repair, always have the tyre inspected/replaced by your dealer.

### Emergency Repair Using a Tyre Repair Kit

If your tyre has a minor puncture, you can make an emergency repair using a tubeless tyre repair kit.

Follow the instructions provided with the emergency tyre repair kit.

Riding your scooter with a temporary tyre repair is very risky. Do not exceed 50 km/h (30 mph). Have the tyre replaced by your dealer as soon as possible.

### **⚠WARNING**

Riding your scooter with a temporary tyre repair can be risky. If the temporary repair fails, you can crash and be seriously injured or killed.

If you must ride with a temporary tyre repair, ride slowly and carefully and do not exceed 50 km/h (30 mph) until the tyre is replaced.

## Electrical Trouble

### Battery Goes Dead

Charge the battery using a motorcycle battery charger.

Remove the battery from the scooter before charging.

Do not use an automobile-type battery charger, as these can overheat a motorcycle battery and cause permanent damage. If the battery does not recover after recharging, contact your dealer.

#### NOTICE


Jump starting using an automobile battery can damage your scooter's electrical system and is not recommended.

### Burned-out Light Bulb

All light bulbs on the scooter are LEDs. If there is a LED which is not turned on, see your dealer for servicing.


Electrical Trouble ► Burned-out Light Bulb

# **Headlight/Front Turn Signal Lights/Position Lights**

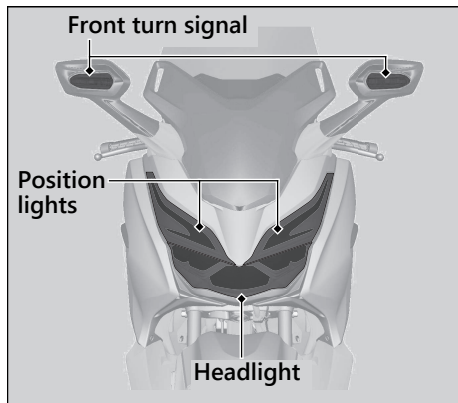

The headlight/front turn signal lights/position lights uses several LEDs. If there is a LED which is not turned on, see your dealer for servicing.

# **Brakelight/Taillight/Rear Turn Signal Lights/License Plate Light**

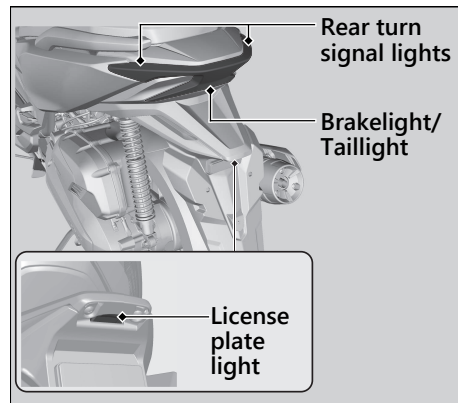


The brakelight/taillight/rear turn signal lights use several LEDs.  
The license plate light uses a LED.  
If there is a LED which is not turned on, see your dealer for servicing.

## Electrical Trouble ► Blown Fuse

## Blown Fuse

Before handling fuses, see "Inspecting and Replacing Fuses." ► P. 78

### Fuse Box Fuses

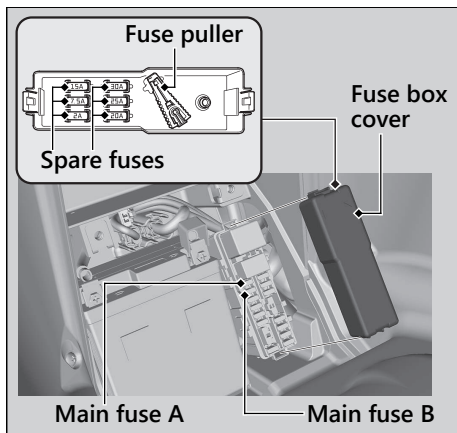

1. Remove the battery lid. ► P. 87
2. Remove the fuse box cover.
3. Pull the main fuse A, main fuse B and other fuses out one by one with the fuse puller furnished in reverse side of the fuse box cover and check for a blown fuse. Always replace a blown fuse with a spare fuse of the same rating.
4. Reinstall the fuse box cover.
5. Install the battery lid.

#### NOTICE

If a fuse fails repeatedly, you likely have an electrical problem. Have your scooter inspected by your dealer.

## Unstable Engine Operation Occurs Intermittently

If the fuel pump filter is clogged, unstable engine operation will occur intermittently while riding.

Even if this symptom occurs, you can continue to ride your scooter.

If unstable engine operation occurs even if sufficient fuel is available, have your scooter inspected by your dealer as soon as possible.

Troubleshooting

# Information

Keys.....	P. 128
Instruments, Controls, & Other Features...	P. 132
Caring for Your Scooter.....	P. 133
Storing Your Scooter.....	P. 136
Transporting Your Scooter .....	P. 137
You & the Environment .....	P. 138
Serial Numbers .....	P. 139
Fuels Containing Alcohol .....	P. 140
Catalytic Converter .....	P. 141

## Keys


### Emergency Key

The emergency key is used for an emergency.

- To unlock the seat. ▣ P. 117
- To unlock the ignition switch. ▣ P. 119

Do not store the emergency key in any compartment.

Information

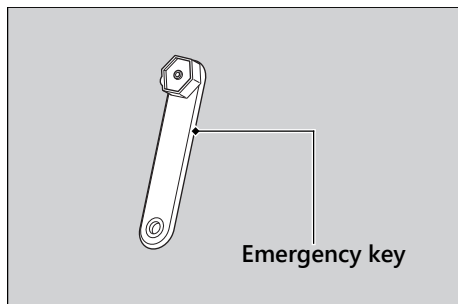

## Keys

### Honda SMART Key

Carrying the Honda SMART Key allows you to perform the following operations:

- Locking or unlocking the ignition switch
- Releasing the seat lock
- Opening the fuel lid
- Locking or unlocking the steering

The ID number of the Honda SMART Key is on the ID tag. You can also unlock the ignition switch by inputting the ID number.

Always carry both the emergency key and ID tag, but separate from the Honda SMART Key, to avoid losing all of them at the same time.

Also store a copy of your ID number in a safe place other than your scooter.

The Honda SMART Key contains electronic circuits. If the circuits are damaged, the Honda SMART Key will not allow you to perform any operations.

- Do not drop the Honda SMART Key or set heavy objects on them.
- Protect the Honda SMART Key from direct sunlight, high temperature, and high humidity.
- Do not scratch or puncture.
- Do not store near any magnetized products such as a magnetized key chain.
- Always keep the Honda SMART Key away from electric appliances such as a TV, radio, PC or low-frequency massage device.




## Keys

- Keep the Honda SMART Key away from liquids. If it gets wet, dry it immediately with a soft cloth.
- Keep the Honda SMART Key away from the scooter while washing the scooter.
- Do not burn.
- Do not wash in the ultrasonic cleaner.
- If fuel, wax, or grease adhere to the Honda SMART Key, wipe it off immediately to avoid cracking or warping.
- Do not disassemble the Honda SMART Key other than when changing a battery. Only the cover of the Honda SMART Key can be disassembled. Do not disassemble other parts.
- Do not lose your Honda SMART Key. If you lose it, you will need to register a new Honda SMART Key. See your dealer with your emergency key and ID tag for registration.

The battery in the Honda SMART Key system normally lasts about 2 years.

Do not keep mobile phones or other radio transmitting devices in luggage box. The radio frequency from the devices will interrupt the Honda SMART Key system.

To get an additional Honda SMART Key, take the Honda SMART Key and the scooter to your dealer.

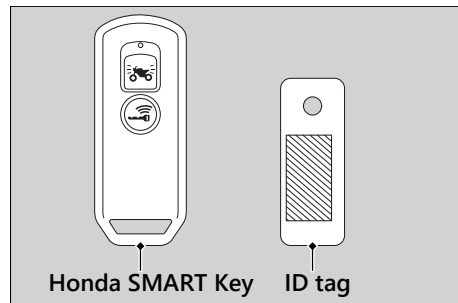

## Keys

**EU Directive**

This Honda SMART Key system complies with the RE (Radio Equipment) Directive (2014/53/EU).



The declaration of conformity to RE Directive is provided to the owner at the time of purchase. The declaration of conformity should be kept at a safe place. When the declaration of conformity is lost or is not provided, contact your dealer.

South Africa only



Morocco only

Singapore only

Complies with  
IMDA Standards  
C080226241

AGREE PAR L'ANRT MAROC

Numéro d'agrément : MR 6164 ANRT 2011  
Date d'agrément : 04/04/2011

Information

## Instruments, Controls, & Other Features

# Instruments, Controls, & Other Features

### Ignition Switch

Leaving the ignition switch in the **I** (On) position with the engine stopped will drain the battery.

Do not turn the ignition switch while riding.

### Odometer

The display locks at 999,999 when the read-out exceeds 999,999.

### Tripmeter

The tripmeters return to 0.0 when each read-out exceeds 9,999.9.

### Document Bag

The owner's manual, registration, and insurance information can be stored in the plastic document bag located underside of the seat.

## Caring for Your Scooter

### Caring for Your Scooter

Frequent cleaning and polishing is important to ensure the life of your Honda. A clean scooter makes it easier to spot potential problems. In particular, seawater and salts used to prevent ice on roads promote the formation of corrosion. Always wash your scooter thoroughly after riding on coastal or treated roads.

#### Washing

Allow the engine, muffler, brakes, and other high-temperature parts to cool before washing.

1. Rinse your scooter thoroughly using a low pressure garden hose to remove loose dirt.
2. If necessary, use a sponge or a soft towel with mild cleaner to remove road grime.
  - ▶ Clean the windscreen, headlight lens, panels, and other plastic components with extra care to avoid scratching them. Avoid directing water into the air cleaner, muffler, and electrical parts.

3. Thoroughly rinse your scooter with plenty of clean water and dry with a soft, clean cloth.
4. After the scooter dries, lubricate any moving parts.
  - ▶ Make sure that no lubricant spills onto the brakes or tyres. Brake discs, pads, drum or shoes contaminated with oil will suffer greatly reduced braking effectiveness and can lead to a crash.
5. Apply a coat of wax to prevent corrosion.
  - ▶ Avoid products that contain harsh detergents or chemical solvents. These can damage the metal, paint, and plastic on your scooter.
  - ▶ Keep the wax clear of the tyres and brakes.
  - ▶ If your scooter has any mat painted parts, do not apply a coat of wax to the mat painted surface.

## Caring for Your Scooter

### ■ Washing Precautions

Follow these guidelines when washing:

- Do not use high-pressure washers:
  - ▶ High-pressure water cleaners can damage moving parts and electrical parts, rendering them inoperable.
  - ▶ Water in the air intake can be drawn into the throttle body and/or enter the air cleaner.
- Do not direct water at the muffler:
  - ▶ Water in the muffler can prevent starting and causes rust in the muffler.
- Dry the brakes:
  - ▶ Water adversely affects braking effectiveness. After washing, apply the brakes intermittently at low speed to help dry them.
- Do not direct water under the seat:
  - ▶ Water in the under seat compartment can damage your documents and other belongings.

- Do not direct water at the air cleaner:
  - ▶ Water in the air cleaner can prevent the engine from starting.
- Do not direct water near the headlight:
  - ▶ The headlight's inside lens may fog temporarily after washing or while riding in the rain. This does not impact the headlight function.  
However, if you see a large amount of water or ice accumulated inside the lens(es), have your vehicle inspected by your dealer.
- Do not use wax or polishing compounds on mat painted surface:
  - ▶ Use a soft cloth or sponge, plenty of water, and a mild detergent to clean mat painted surfaces. Dry with a soft clean cloth.

## Caring for Your Scooter

### Aluminium Components

Aluminium will corrode from contact with dirt, mud, or road salt. Clean aluminium parts regularly and follow these guidelines to avoid scratches:

- Do not use stiff brushes, steel wool, or cleaners containing abrasives.
- Avoid riding over or scraping against curbs.

### Panels

Follow these guidelines to prevent scratches and blemishes:

- Wash gently using a soft sponge and plenty of water.
- To remove stubborn stains, use diluted detergent and rinse thoroughly with plenty of water.
- Avoid getting petrol, brake fluid, or detergents on the instruments, panels, or headlight.

### Windscreen

Using plenty of water, clean the windscreen with a soft cloth or sponge. (Avoid using detergents or any kind of chemical cleaner on the windscreen.) Dry with a soft, clean cloth.

#### NOTICE

To avoid possible scratching or other damage, use only water and a soft cloth or sponge to clean the windscreen.

For a dirtier windscreen, use a diluted neutral detergent with a sponge and plenty of water. Make sure to wash off all the detergent. (Detergent residue may cause windscreen cracks.)

Replace the windscreen if scratches cannot be removed and they obstruct clear vision.

Take care to keep battery electrolyte, brake fluid, or other chemical solvents off the windscreen and screen garnish. They will damage the plastic.

## Storing Your Scooter

### Exhaust Pipe and Muffler

When the exhaust pipe and muffler are painted, do not use a commercially available abrasive kitchen cleaning compound. Use a neutral detergent to clean the painted surface on the exhaust pipe and muffler. If you are not sure if your exhaust pipe and muffler are painted, contact your dealer.

Information

## Storing Your Scooter

If you store your scooter outdoors, you should consider using a full-body motorcycle cover. If you won't be riding for an extended period, follow these guidelines:

- Wash your scooter and wax all painted surfaces (except mat painted surfaces). Coat chrome pieces with rust-inhibiting oil.
- Place your scooter on its centre stand and position a block so that both tyres are off the ground.
- After rain, remove the body cover and allow the scooter to dry.
- Remove the battery (P. 86) to prevent discharge. Fully charge the battery and then place it in a shaded, well-ventilated area.
  - If you leave the battery in place, disconnect the negative  $\ominus$  terminal to prevent discharge.

## Transporting Your Scooter

After removing your scooter from storage, inspect all maintenance items required by the Maintenance Schedule.

### Transporting Your Scooter

If your scooter needs to be transported, it should be carried on a motorcycle trailer or a flatbed truck or trailer that has a loading ramp or lifting platform, and motorcycle tie-down straps. Never try to tow your scooter with a wheel or wheels on the ground.

#### NOTICE

Towing your scooter can cause serious damage to the transmission.

Information



## You & the Environment

### You & the Environment

Owning and riding a scooter can be enjoyable, but you must do your part to protect the environment.

#### Choose Sensible Cleaners

Use a biodegradable detergent when you wash your scooter. Avoid aerosol spray cleaners that contain chlorofluorocarbons (CFCs) which damage the atmosphere's protective ozone layer.

Information



#### Recycle Wastes

Put oil and other toxic wastes in approved containers and take them to a recycling centre. Call your local or state office of public works or environmental services to find a recycling centre in your area, and to get instructions on how to dispose of non-recyclable wastes. Do not place used engine oil in the trash, or pour it down a drain or on the ground. Used oil, petrol, coolant, and cleaning solvents contain poisons that can hurt refuse workers and contaminate drinking water, lakes, rivers, and oceans.

## Serial Numbers

### Serial Numbers

The frame and engine serial numbers uniquely identify your scooter and are required in order to register your scooter. They may also be required when ordering replacement parts. You should record these numbers and keep them in a safe place.

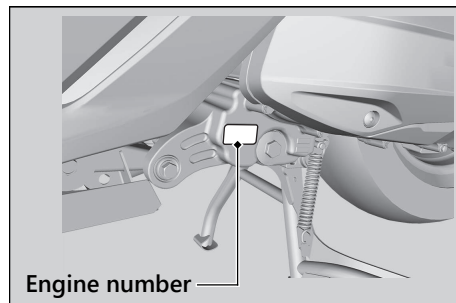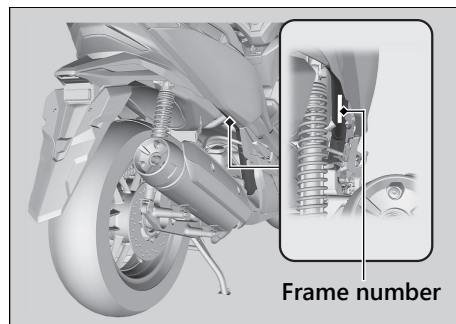

## Fuels Containing Alcohol

### Fuels Containing Alcohol

Some conventional fuels blended with alcohol are available in some locales to help reduce emissions to meet clean air standards. If you plan to use blended fuel, check that it is unleaded and meets the minimum octane rating requirement.

The following fuel blends can be used in your scooter:

- Ethanol (ethyl alcohol) up to 10% by volume.
  - ▶ Petrol containing ethanol may be marketed under the name Gasohol.

The use of petrol containing more than 10% ethanol may:

- Damage the painting of the fuel tank.
- Damage the rubber tubes of the fuel line.
- Cause corrosion of the fuel tank.
- Cause poor drivability.

#### NOTICE

Use of blended fuels containing higher than approved percentages can damage metal, rubber, plastic parts of your fuel system.

If you notice any undesirable operating symptoms or performance problems, try a different brand of petrol.

## Catalytic Converter

### Catalytic Converter

This scooter is equipped with two three-way catalytic converters. Each catalytic converter contains precious metals that serve as catalysts in high temperature chemical reactions that convert hydrocarbons (HC), carbon monoxide (CO), and oxides of nitrogen (NOx) in the exhaust gasses into safe compounds.

A defective catalytic converter contributes to air pollution and can impair your engine's performance. A replacement unit must be an original Honda part or equivalent.

Follow these guidelines to protect your scooter's catalytic converters.

- Always use unleaded petrol. Leaded petrol will damage the catalytic converters.
- Keep the engine in good running condition.
- Have your scooter serviced if your engine is misfiring, backfiring, stalling, or otherwise not running properly, stop riding and turn off the engine.

## Specifications

### ■ Main Components

Overall length	Except	2,140 mm (84.3 in)
	∇ E, IV ED type	2,170 mm (85.4 in)
Overall width	Except	755 mm (29.7 in)
	∇ E, IV ED type	1,470 mm (57.9 in)
Overall height	Except	1,360 mm (53.5 in)
	∇ E, IV ED type	(Screen lowest position)
Wheelbase		1,490 mm (58.7 in)
Minimum ground clearance		145 mm (5.7 in)
Caster angle		26° 30'
Trail		89 mm (3.5 in)
Curb weight	Except	162 kg (357 lb)
	∇ E, IV ED type	164 kg (362 lb)
Maximum weight capacity *1	Except	180 kg (397 lb)
	∇ E, IV ED type	19 kg (42 lb)
Maximum luggage weight *2	Luggage box	10 kg (22 lb)
	Glove box	1.5 kg (3.3 lb)
	∇ E, IV ED type	
Passenger capacity	Rear carrier	5.0 kg (11.0 lb)
Passenger capacity		Rider and 1 passenger
Minimum turning radius		2.07 m (6.8 ft)

\*1: Including rider, passenger, all luggage, and accessories.

\*2: Includes the weight of the luggage and added accessories.

Displacement	125 cm <sup>3</sup> (7.6 cu-in)
Bore x stroke	52.4 x 57.9 mm (2.06 x 2.28 in)
Compression ratio	11.5:1
Fuel	Unleaded petrol Recommended: 91 RON or higher
Fuels containing alcohol	ETHANOL up to 10 % by volume
Tank capacity	11.5 L (3.04 US gal, 2.53 Imp gal)
Battery	YTZ8V
	12 V-7 Ah (10 HR) / 7.4 Ah (20 HR)
Primary reduction	V-Matic (2.790:1 ~ 0.820:1)
Final reduction	10.021

## Specifications

## ■ Service Data

Tyre size	Front	120/70-15M/C 56P	
		MICHELIN:	
	Rear	140/70-14 M/C 68P	
Tyre type		IRC:	
		140/70-14M/C 62P	
		Bias-ply, tubeless	
Recommended Tyre	Front	MICHELIN	CITY GRIP
		IRC	SS-560F
	Rear	MICHELIN	CITY GRIP
Tyre category of use		IRC	SS-560R
	Normal	Permitted	
	Special	Not permitted	
	Snow	Not permitted	
Tyre air pressure	Front	200 kPa (2.00 kgf/cm <sup>2</sup> , 29 psi)	
	Rear	225 kPa (2.25 kgf/cm <sup>2</sup> , 33 psi)	
Spark plug	(standard)	SILMAR8C9 (NGK)	
Spark plug gap		0.80 - 0.90 mm (0.031 - 0.035 in)	
Idle speed		1,700 ± 100 rpm	

Recommended engine oil	Honda 4-stroke motorcycle oil API Service Classification SG or higher, excluding oils marked as "Energy Conserving" or "Resource Conserving," SAE 10W-30, JASO T 903 standard MB	
	After draining	0.8 L (0.8 US qt, 0.7 Imp qt)
Engine oil capacity	After draining & cleaning strainer screen	0.8 L (0.8 US qt, 0.7 Imp qt)
	After disassembly	0.9 L (1.0 US qt, 0.8 Imp qt)
	After draining	0.12 L (0.13 US qt, 0.11 Imp qt)
Transmission oil capacity	After disassembly	0.14 L (0.15 US qt, 0.12 Imp qt)
	Recommended brake fluid	Honda DOT 4 Brake Fluid
Cooling system capacity	0.46 L (0.49 US qt, 0.40 Imp qt)	
Recommended coolant	Pro Honda HP Coolant	

## Specifications

### ■ Bulbs

Headlight	LED
Brakelight/Tailight	LED
Front turn signal light	LED
Rear turn signal light	LED
License plate light	LED
Position light	LED

### ■ Fuses

Main fuse A	25 A
Main fuse B	20 A
Other fuse	30 A, 15 A, 7.5 A, 2 A

### ■ Torque Specifications

Oil plug	20 N·m (2.0 kgf·m, 15 lbf·ft)
Engine oil drain bolt	24 N·m (2.4 kgf·m, 18 lbf·ft)

## Index

### A

ABS (Anti-lock Brake System) .....	13, 109
ABS Indicator .....	38, 109
Accessories .....	16
Accessory Socket .....	63
Air Temperature Gauge .....	23
Answer Back System .....	51
Available Driving Distance .....	23
Average Fuel Mileage .....	23

### B

Basic Operation Flow .....	18
Battery .....	76, 86
Battery Voltage Meter .....	23

### Brakes

Fluid .....	80, 95
Pad Wear .....	96

Braking .....	12
---------------	----

### Bulb

Brakelight/Tailight .....	124
Headlight .....	124
License Plate Light .....	124
Position Light .....	124
Rear Turn Signal .....	124

### C

Caring for Your Scooter .....	133
Catalytic Converter .....	141
Clock .....	23
Colour Label .....	75
Compartment	
Document Bag .....	67, 132
Owner's Manual .....	67, 132
Tool Kit .....	67
Coolant .....	80, 92
Coolant Temperature Gauge .....	23
Crankcase Breather .....	99
Current Fuel Mileage .....	23

### D

Digital Clock Adjustment .....	35
Display Setting .....	34
Document Bag .....	67, 132

### E

Elapsed Time .....	23
Electrical Trouble .....	123



**Emergency**

Emergency Key.....	128
Unlock the Ignition Switch.....	119
Unlock the Seat.....	117

**Engine**

Number.....	139
Oil.....	79, 88
Oil Strainer Screen.....	89
Overheats.....	107
Starting.....	56

<b>Environment</b> .....	138
--------------------------	-----

**F**

<b>Flooded Engine</b> .....	56
-----------------------------	----

<b>Frame Number</b> .....	139
---------------------------	-----

**Fuel**

Gauge.....	23
Recommended.....	61
Remaining.....	29
Tank Capacity.....	61

<b>Fuels Containing Alcohol</b> .....	140
---------------------------------------	-----

<b>Fuses</b> .....	78, 125
--------------------	---------

**G**

<b>Gasohol</b> .....	140
----------------------	-----

<b>Glove Box</b> .....	68
------------------------	----

**H**

<b>Hazard Switch</b> .....	40
----------------------------	----

<b>Headlight Aim</b> .....	100
----------------------------	-----

<b>Headlight Dimmer Switch</b> .....	40
--------------------------------------	----

<b>Helmet Holder</b> .....	65
----------------------------	----

<b>High Beam Indicator</b> .....	39
----------------------------------	----

**High Coolant Temperature**

Indicator.....	39, 107
----------------	---------

<b>Honda SMART Key</b> .....	129
------------------------------	-----

<b>Honda SMART Key Battery</b> .....	103
--------------------------------------	-----

<b>Honda SMART Key Indicator</b> .....	38
--	----

<b>Honda SMART Key System</b> .....	43
-------------------------------------	----

<b>Horn Button</b> .....	40
--------------------------	----

**I**

<b>Idling Stop Indicator</b> .....	39, 54
------------------------------------	--------

<b>Idling Stop Switch</b> .....	40, 53
---------------------------------	--------

<b>Idling Stop System</b> .....	53
---------------------------------	----

**Ignition Cut-off System**

Side Stand.....	97
-----------------	----

<b>Ignition Switch</b> .....	41, 132
<b>Image Labels</b> .....	6
<b>Indicators</b> .....	38
<b>Instruments</b> .....	22

## K

### Key

Emergency Key .....	128
Honda SMART Key .....	43

## L

<b>Labels</b> .....	6
<b>Load Limits</b> .....	17
<b>Loading Guidelines</b> .....	17
<b>Luggage Box</b> .....	66

## M

### Maintenance

Fundamentals .....	74
Importance .....	70
Safety .....	70
Schedule .....	71

<b>Maintenance Indicator</b> .....	23
------------------------------------	----

<b>Maximum Weight Limit</b> .....	17, 142
-----------------------------------	---------

<b>Modifications</b> .....	16
----------------------------	----

## O

<b>Odometer</b> .....	23, 132
-----------------------	---------

### Oil

Engine .....	79, 88
--------------	--------

<b>Oil Change Indicator</b> .....	23
-----------------------------------	----

<b>Overheating</b> .....	107
--------------------------	-----

## P

<b>Parking</b> .....	13
----------------------	----

<b>Parts Location</b> .....	20
-----------------------------	----

<b>Petrol</b> .....	15, 61, 142
---------------------	-------------

### PGM-FI (Programmed Fuel Injection)

Malfunction Indicator Lamp (MIL)....	38, 108
--------------------------------------	---------

<b>Protective Apparel</b> .....	11
---------------------------------	----

## R

<b>Rear Carrier</b> .....	67
---------------------------	----

### Recommended

Coolant .....	80
---------------	----

Engine Oil .....	79
------------------	----

Fuel .....	61
------------	----

<b>Refuelling</b> .....	61
-------------------------	----

<b>Removal</b>	
Battery.....	86
Battery Lid.....	87
<b>Repair Kit</b> .....	122
<b>Riding Precautions</b> .....	12
 <b>S</b>	
<b>Safety Precautions</b> .....	11
<b>Seat</b> .....	64
<b>Serial Numbers</b> .....	139
<b>Side Stand</b> .....	97
<b>Side Stand Ignition Cut-off System</b> .....	56, 97
<b>Specifications</b> .....	142
<b>Speedometer</b> .....	22
<b>Start Button</b> .....	40, 57
<b>Starting the Engine</b> .....	56
<b>Starting the Scooter</b> .....	59
<b>Steering Lock</b> .....	42
<b>Storage</b>	
Equipment.....	64
Glove Box.....	68
Luggage Box.....	66
Owner's Manual.....	67, 132
Rear Carrier.....	67
Tool Kit.....	67
<b>Storing Your Scooter</b> .....	136
<b>Switches</b> .....	40
 <b>T</b>	
<b>Tachometer</b> .....	22
<b>Throttle</b> .....	98
<b>Tool Kit</b> .....	67, 85
<b>Transporting Your Scooter</b> .....	137
<b>Tripmeter</b> .....	23, 132
<b>Troubleshooting</b> .....	105
<b>Turn Signal Indicators</b> .....	39
<b>Turn Signal Switch</b> .....	40
<b>Tyres</b>	
Air Pressure.....	81, 143
Puncture.....	122
Replacing.....	81
 <b>W</b>	
<b>Warning Indicator On</b> .....	108
<b>Washing Your Scooter</b> .....	133
<b>Weight Limit</b> .....	17
<b>Windscreen</b> .....	102
<b>Windscreen Adjusting Switch</b> .....	41